



Secure the world with you

**Network Camera
User Manual**

Copyright © Shenzhen TVT Digital Technology Co., Ltd. 2024. All rights reserved.

TVT is the trademark of Shenzhen TVT Digital Technology Co., Ltd. In this Manual, the trademarks, product names, service names, company names, products that are not owned by our company are the properties of their respective owners.

Without the written consent of Shenzhen TVT Digital Technology Co., Ltd. (the “Company”), no entity or individual may extract, copy, translate, revise, or distribute the content of this Manual (the “Manual”) in part or all, or transmit in any form.

About This Manual

- This manual is suitable for many models. All examples, screenshots, figures, charts, and illustrations used in the manual are for reference purpose, and actual products may be different with this Manual.
- Please read this user manual carefully to ensure that you can use the device correctly and safely.
- Within the maximum scope permitted by the law, the products described in this Manual (including hardware, software, firmware, etc.) are provided “AS IS”. The information in this document (including URL and other Internet site reference data) is subject to change without notice. This Manual may contain technical incorrect places or printing errors. This information will be periodically updated, and these changes will be added into the latest version of this Manual without prior notice.
- In this manual, the trademarks, product names, company names and products that are not owned by our company are the properties of their respective owners.

Use of the Product

- This product should not be used for illegal purposes.
- The company does not allow anyone to use the Company's products to infringe the privacy, personal information, and portrait rights of others. The user shall not use this product for any illegal use or any prohibited use under these terms, conditions, and declarations. When using this product, the user shall not damage, disable, overload or obstruct any of the hardware of this product in any way, or interfere with the use of this product by any other users. Also, the user should not attempt to use the product or the software, by hacking, stealing the password, or any other means.

Privacy Protection

- When installing cameras in public areas, a warning notice shall be given in a reasonable and effective manner and clarify the monitoring range.
- As the device user or data controller, you might collect the personal data of others, such as face, car plate number, etc. As a result, you shall implement reasonable and necessary measures to protect the legitimate rights and interests of other people, avoiding data leakage, improper use, including but not limited to, setting up access control, providing clear and visible notice to inform people of the existence of the surveillance area, providing required

contact information and so on.

Disclaimer

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, Our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations.

Safety Instruction

The following symbols or words may be found in this manual.

Symbols/Words	Description
⚠ Warning	Indicates a medium or low potential hazardous situation which , if not avoided, will or could result in slight or moderate injury
⚠ Caution	Indicates a potential risk which, if not avoided, will or could result in device damage, data loss, lower performance or unexpected results
📌 Note	Provides additional information to emphasize or supplement important points of the text.

Electrical Safety

- This product is intended to be supplied by a Listed Power Unit, marked with 'Limited Power Source', 'LPS' on unit, output rated minimum 12V/2 A or POE 48V/ 350mA or AC24V (depending on models), no more than 2000m altitude of operation and Tma=60 Deg.C.
- As for the modes with PoE function, the function of the ITE being investigated to IEC 60950-1 standard is considered not likely to require connection to an Ethernet network with outside plant routing, including campus environment and the ITE is to be connected only to PoE networks without routing to the outside plant.
- Improper handling and/or installation could run the risk of fire or electrical shock.
- The product must be grounded to reduce the risk of electric shock.
- ⚠ Warning: Wear anti-static gloves or discharge static electricity before removing the bubble or cover of the camera.

Environment

- Heavy stress, violent vibration or exposure to water is not allowed during transportation,

storage and installation.

- Avoid aiming the camera directly towards extremely bright objects, such as, sun, as this may damage the image sensor.
- Keep away from heat sources such as radiators, heat registers, stove, etc.
- Do not expose the product to the direct airflow from an air conditioner.
- Do not block any ventilation openings and ensure proper ventilation around the camera.
- Do not place the device in a damp, dusty extremely hot or cold environment, or the locations with strong electromagnetic radiation or unstable lighting.
- The IR LED's should at no time be covered when the camera is running to prevent overheating and the possible risk of fire.
- Make sure that no reflective surface is too close to the camera lens. The IR light from the camera may reflect back into the lens, resulting in image blur.

Operation and Daily Maintenance

- There are no user-serviceable parts inside. Please contact the nearest service center if the product does not work properly.
- Please shut down the device and then unplug the power cable before you begin any maintenance work.
- ⚠ Warning: All the examination and repair work should be done by qualified personnel.
- Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.
- Always use a dry soft cloth to clean the device. If there is too much dust, use a cloth cleaning (such as using cloth) may result in poor IR functionality and/or IR reflection.
- Dome cover is an optical device, please don't touch or wipe the cover surface directly during installation and use. For dust, use oil-free soft brush or hair dryer to remove it gently; for grease or finger print, use oil-free cotton cloth or paper soaked with detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is not clean enough.

Cybersecurity Recommendations

- Use a strong password. At least 8 characters or a combination of characters, numbers, and upper and lower case letters should be used in your password.
- Regularly change the passwords of your devices to ensure that only authorized users can access the system (recommended time is 90 days).
- It is recommended to change the service default ports (like HTTP-80, HTTPS-443, etc.) to reduce the risk of outsiders being able to access.
- It is recommended to set the firewall of your router. But note that some important ports cannot be closed (like HTTP port, HTTPS port, Data Port).
- It is not recommended to expose the device to the public network. When it is necessary to be exposed to the public network, please set the external hardware firewall and the corresponding firewall policy.
- It is not recommended to use the v1 and v2 functions of SNMP.
- In order to enhance the security of web client access, please create a TLS certificate to

enable HTTPS.

- Use black and white list to filter the IP address. This will prevent everyone, except those specified IP addresses from accessing the system.
- If you add multiple users, please limit functions of guest accounts.
- If you enable UPnP, it will automatically try to forward ports in your router or modem. It is really very convenient for users, but this will increase the risk of data leakage when the system automatically forwards ports. Disabling UPnP is recommended when the function is not used in real applications.
- Check the log. If you want to know whether your device has been accessed by unauthorized users or not, you can check the log. The system log will show you which IP addresses were used to log in your system and what was accessed.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1.FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2. FCC conditions:

- This device complies with part 15 of the FCC Rules. Operation of this product is subject the following two conditions:
- This device may not cause harmful interface.
- This device must accept any interference received, including interference that may cause undesired operation.

RoHS

The products have been designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible manner.

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.



This series of products are covered by one or more claims of the HEVC patents listed at patentlist.accessadvance.com

Table of Contents

1	Network Connection.....	1
1.1	LAN.....	1
1.1.1	Access through IP-Tool	1
1.1.2	Directly Access via Web Browser.....	3
1.2	WAN.....	5
2	Live View	8
3	Network Camera Configuration.....	11
3.1	System Configuration	11
3.1.1	Basic Information	11
3.1.2	Date and Time	11
3.1.3	Local Config.....	12
3.1.4	Storage.....	12
3.2	Image Configuration	15
3.2.1	Display Configuration	15
3.2.2	Video / Audio Configuration	18
3.2.3	OSD Configuration.....	20
3.2.4	Video Mask	20
3.2.5	ROI Configuration.....	21
3.2.6	Lens Control	22
3.3	PTZ Configuration.....	23
3.4	Alarm Configuration.....	23
3.4.1	Motion Detection.....	23
3.4.2	Exception Alarm.....	25
3.4.3	Alarm In	27
3.4.4	Alarm Out.....	28
3.4.5	Alarm Server	29
3.4.6	Video Exception	29
3.4.7	Audio Exception	31
3.5	Event Configuration.....	32
3.5.1	Object Abandoned/Missing.....	33
3.5.2	Line Crossing.....	35
3.5.3	Region Intrusion	41
3.5.4	Region Entrance	43
3.5.5	Region Exiting.....	43
3.5.6	Target Counting by Line	44
3.5.7	Target Counting by Area.....	47
3.5.8	Heat Map	49
3.5.9	Loitering Detection.....	50
3.5.10	Illegal Parking Detection	51
3.5.11	Video Metadata.....	53

3.5.12	Face Detection	56
3.6	Network Configuration	60
3.6.1	TCP/IP	60
3.6.2	Port	61
3.6.3	Server Configuration	61
3.6.4	Onvif.....	62
3.6.5	DDNS	62
3.6.6	SNMP	64
3.6.7	802.1x.....	66
3.6.8	RTSP.....	66
3.6.9	RTMP	67
3.6.10	UPNP.....	68
3.6.11	Email	68
3.6.12	FTP.....	69
3.6.13	HTTP POST	71
3.6.14	HTTPS.....	72
3.6.15	QoS.....	73
3.7	Security Configuration.....	73
3.7.1	User Configuration	73
3.7.2	Online User.....	75
3.7.3	Block and Allow Lists	76
3.7.4	Security Management	76
3.8	Maintenance Configuration.....	77
3.8.1	Backup and Restore	77
3.8.2	Reboot	78
3.8.3	Upgrade	79
3.8.4	Operation Log.....	79
4	Search	80
4.1	Image Search	80
4.2	Video Search.....	81
	Appendix.....	84
	Appendix 1 Troubleshooting	84

1 Network Connection

System Requirement

For proper operating the product, the following requirements are suggested for your computer.

Operating System: Windows 10 professional version or higher

CPU: i7-117000 2.5GHz or higher

GPU: AMD770+intel UHD Graphics 750

RAM: 8G or higher

Display: 1920*1080 resolution or higher

Web browser: IE (plug-in required)/ Firefox/Edge/Safari/Google Chrome

It is recommended to use the latest version of these web browsers.

The menu display and operation of the camera may be slightly different by using the browser with plug-in or without plug-in. Installing the plug-in will display more functions of the camera.


Connect IP camera via LAN or WAN. Here only take IE browser for example. The details are as follows:

1.1 LAN


In LAN, there are two ways to access IP camera: 1. access through IP-Tool; 2. directly access via web browser.

1.1.1 Access through IP-Tool

Network connection:

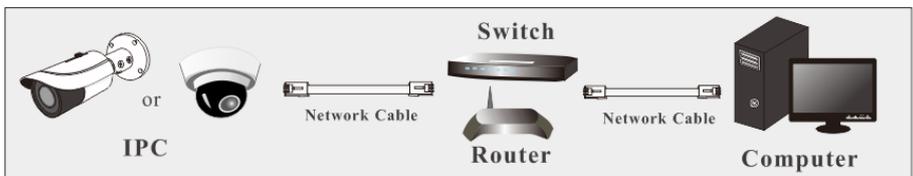


- ① Make sure the PC and IP camera are connected to the LAN and the IP-Tool is installed in the PC.
- ② Double click the IP-Tool icon on the desktop to run this software as shown below:

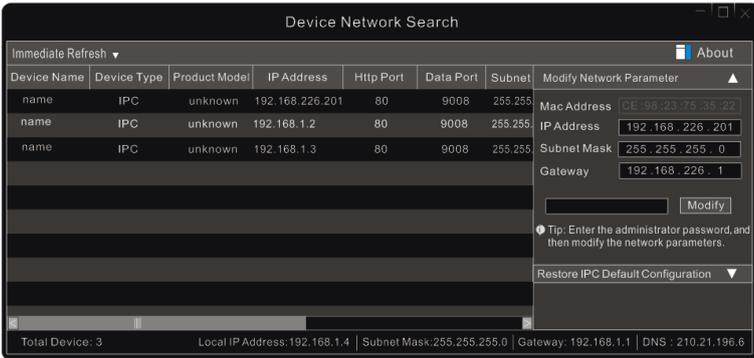

The default IP address of the camera is **192.168.226.201**.


③ Double click the IP address and then the system will open a web browser to connect IP camera. After you read the privacy statement, check and click “Already Read”. Then activate the device.

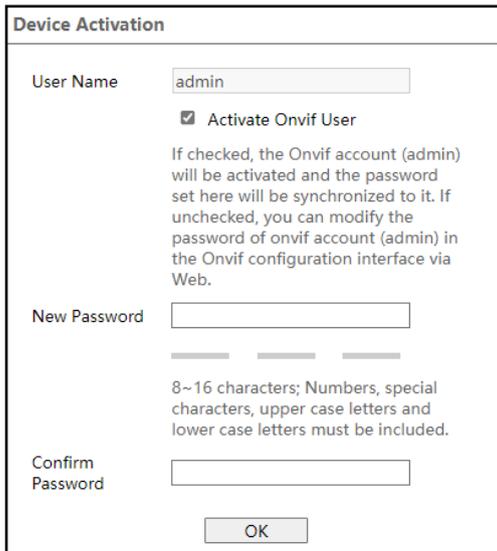

Please self-define the password of admin according to the tip.

If “Activate Onvif User” is enabled, the ONVIF user can be activated simultaneously. When you connect the camera through the ONVIF protocol in the third-party platform, you can use the default username and the password set above to connect. Should you wish to change the ONVIF password to a different password than your admin password, go to the ONVIF section to change the password. (*Config* → *Network* → *Ports/Connections* → *Onvif*)

After that, follow directions to download, install and run the Active X control if prompted. Re-connect your camera via your web browser and then a login box will appear.

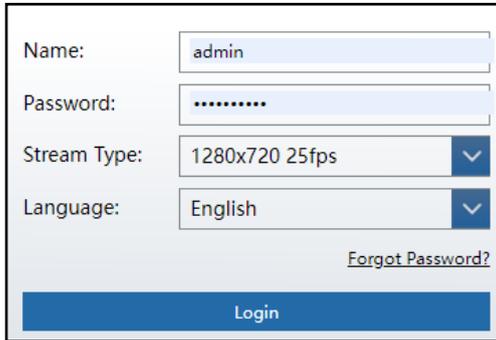

The screenshot shows a login form with the following fields and options:

- Name: admin
- Password: [masked]
- Stream Type: 1280x720 25fps
- Language: English
- Forgot Password? (link)
- Login (button)

Please enter the user name (admin) and password. Then select the stream type and language as needed.

Stream Type: The plug-in free live view only supports 1080P or lower resolution.

The security questions should be set after you click “Login” button. It is very important for you to reset your password. Please remember these answers.

If you forget the admin password, you can reset the password by clicking **Forget Password** on the login page. Then you can reset the password by the security questions and answers you set.

You can set the account security question during the activation, or you can go to **Config → Security → User**, click **Safety Question**, select the security questions and input your answers.

1.1.2 Directly Access via Web Browser

The default network settings are as shown below:

IP address: 192.168.226.201


Subnet Mask: 255.255.255.0

Gateway: 192.168.226.1


HTTP: 80

Data port: 9008


Use the above default settings when logging in the camera for the first time. Directly connect the camera to the computer through network cable.

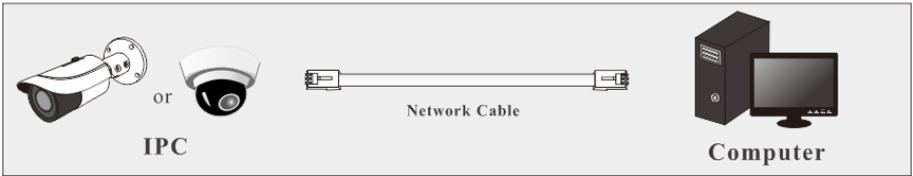

① Manually set the IP address of the PC and the network segment should be as the same as the default settings of the IP camera. Open the network and share center. Click “Local Area Connection” to pop up the following window.

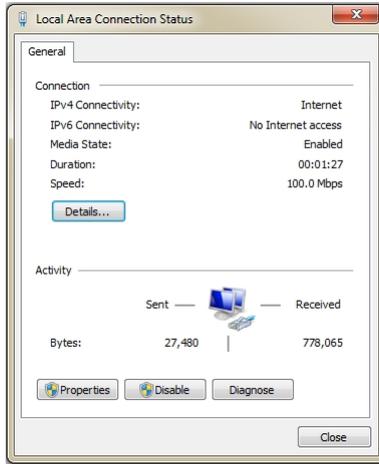


Select “Properties” and then select internet protocol according to the actual situation (for example: IPv4). Next, click the “Properties” button to set the network of the PC.

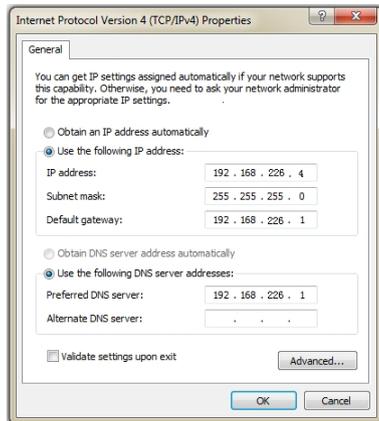

- ② Open a web browser and enter the default address of IP camera and confirm.
- ③ Follow directions to download and install the Active X control.
- ④ Enter the default username and password in the login window and then enter to view.

1.2 WAN

➤ Access through a router or virtual server

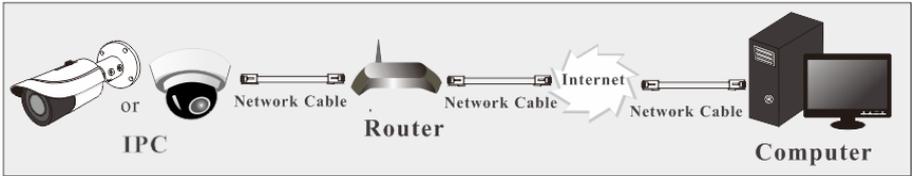

- ① Make sure the camera is connected to the local network and then log in the camera via LAN and go to **Config** → **Network** → **Port** menu to set the port number.

HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
Data Port	<input type="text" value="9008"/>
RTSP Port	<input type="text" value="554"/>

Port Setup

- ② Go to **Config** → **Network** → **TCP/IP** menu to modify the IP address.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input type="radio"/> Obtain an IP address automatically			
<input checked="" type="radio"/> Use the following IP address			
IP Address	<input type="text" value="192.168.226.201"/>	<input type="button" value="Test"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>		
Gateway	<input type="text" value="192.168.226.1"/>		
Preferred DNS Server	<input type="text" value="210.21.196.6"/>		
Alternate DNS Server	<input type="text" value="8.8.8.8"/>		

IP Setup

- ③ Go to the router's management interface via a web browser to forward the IP address and

port of the camera in the “Virtual Server”.


Port Range						
Application	Start	End	Protocol	IP Address	Enable	
1	9007	to 9008	Both	192.168.1.201	<input checked="" type="checkbox"/>	
2	80	to 81	Both	192.168.1.201	<input checked="" type="checkbox"/>	
3	10000	to 10001	Both	192.168.1.166	<input type="checkbox"/>	
4	21000	to 21001	Both	192.168.1.166	<input type="checkbox"/>	

Router Setup

④ Open a web browser and enter its WAN IP and http port to access. (for example, if the http port is changed to 81, please enter “192.198.1.201:81” in the address bar of the web browser to access).

➤ **Access through PPPoE dial-up**

Network connection

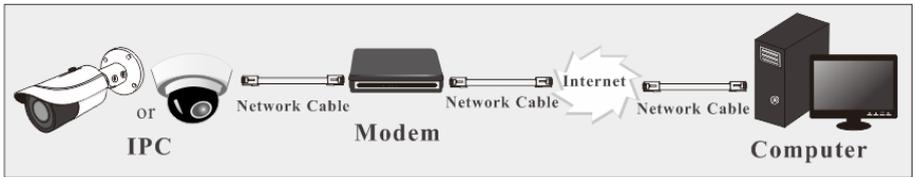

Access the camera through PPPoE auto dial-up. The setup steps are as follow:

- ① Go to **Config** → **Network** → **Port** menu to set the port number.
- ② Go to **Config** → **Network** → **TCP/IP** → **PPPoE Config** menu. Enable PPPoE and then enter the user name and password from your internet service provider.


IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input checked="" type="checkbox"/> Enable			
User Name		<input type="text" value="xxxxxxx"/>	
Password		<input type="password" value="•••••"/>	
<input type="button" value="Save"/>			

③ Go to **Config** → **Network** → **DDNS** menu. Before configuring the DDNS, please apply for a domain name first. Please refer to the DDNS configuration for detail information.

④ Open a web browser and enter the domain name and http port to access.

➤ **Access through static IP**

Network connection

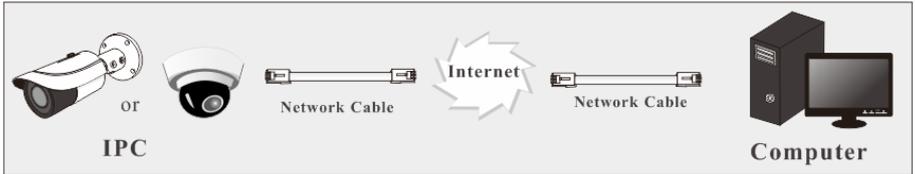

The setup steps are as follow:

- ① Go to **Config → Network → Port** menu to set the port number.
- ② Go to **Config → Network → TCP/IP** menu to set the IP address. Check “Use the following IP address” and then enter the static IP address and other parameters.
- ③ Open a web browser and enter its WAN IP and http port to access.

After logging in, the following window will be shown.



The following table is the instructions of the icons on the live view interface.

Icon	Description	Icon	Description
	Original size		SD card recording indicator
	Fit correct scale		Motion alarm indicator
	Auto (fill the window)		Color abnormal indicator
	Full screen		Abnormal clarity indicator
	Start/stop live view		Scene change indicator
	Start/stop two-way audio (only available for the model with audio input connector)		Video metadata extraction indicator
	Enable/disable audio		Line crossing indicator
	Enable/disable alarm output (only available for the model with alarm output connector)		Alarm output indicator
	Snapshot		Intrusion indicator
	Start/stop local recording		Region entrance indicator
	Zoom in		Region exiting indicator

Icon	Description	Icon	Description
	Zoom out		Face detection indicator
	AZ control (only available for the model with a motorized zoom lens)		Target counting (by line) indicator
	Face capture (it only can be used after enabling face event mode)		Target counting (by area) indicator
	Rule information display		Heat map indicator
	Video metadata display(it only can be used after enabling target attribute analysis mode)		Object detection indicator (object abandoned/missing)
	PTZ control (only some models support)		Loitering detection indicator
	Audio exception indicator		Illegal parking detection indicator
	Sensor alarm indicator		

To set the stream profile, select Main stream, Sub stream, or Third stream.

Main stream: Delivers high definition video for real-time monitoring, recording and storage.

Sub stream: Delivers high-definition video for real-time monitoring, recording and storage.

Third stream: Delivers low-definition video.

The properties for each stream type are configured on the **Config → Image → Video/Audio** page.

*Those smart alarm indicators will flash only when the camera supports those functions and the corresponding events are enabled.

*Plug-in free live view: PTZ control, two-way audio and local recording are not supported and the preview mode switch (real-time/balanced/fluent mode) is not available too.

In full screen mode, double click on the mouse to exit or press the ESC key on the keyboard.

Click AZ control button to show AZ control panel. The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Zoom -		Zoom +
	Focus -		Focus +
	One key focus (used when image is out of focus after manual adjustment)		

Some cameras can be installed in a compatible external PTZ enclosure through RS485. Click the PTZ icon to reveal the PTZ control panel.

The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Move upper left direction		Move upper right direction
	Move up		Stop movement
	Move left		Move right
	Move lower left direction		Move lower right direction
	Move down		Speed adjustment
	Zoom out		Zoom in
	Focus -		Focus +
	Iris -		Iris +
	Auto scan		Wiper
	Light		Radom scan
	Group scan		Preset

Select preset and click to call the preset. Select and set the preset and then click to save the position of the preset. Select the set preset and click to delete it.

Descriptions of Rule Information



Color Descriptions of Target Recognition box:

Green box: detect human

Purple box: detect motor vehicle

Light blue box: detect non-motor vehicle (motorcycle/bicycle)

Target box after an event is triggered: turn yellow

Rule line or area color display:

Rule line or area: blue

Rule line or area after an event is triggered: turn from blue to red

3 Network Camera Configuration

In the Webcam client, choose “Config” to go to the configuration interface.

Note: Wherever applicable, click the “Save” button to save the settings.

3.1 System Configuration

3.1.1 Basic Information

In the “Basic Information” interface, the system information of the device is listed, including device name, product model, software version, Onvif version, MAC, etc.

3.1.2 Date and Time

Go to *Config* → *System* → *Date and Time*. Please refer to the following interface.

Zone	Date and Time			
Zone	GMT (Dublin, Lisbon, London, Reykjavik) ▼			
<input type="checkbox"/>	DST			
<input checked="" type="radio"/>	Auto DST			
<input type="radio"/>	Manual DST			
Start Time	January ▼	First ▼	Sunday ▼	00 ▼ Hour
End Time	February ▼	First ▼	Monday ▼	00 ▼ Hour
Time Offset	120 Minutes ▼			
<input type="button" value="Save"/>				

Select the time zone and DST as required.

Note: The time zone of the camera and the computer must be the same. It is recommended to modify the time zone of the camera according to the time zone of the computer. If the time zone of the computer is modified, the current web client needs to be closed. Then re-open it and log in again.

Click the “Date and Time” tab to set the time mode and time format.

Zone	Date and Time
Time Mode:	
<input checked="" type="radio"/> Synchronize with NTP server	
NTP server:	time.windows.com
Update period:	1440 Minutes
<input type="radio"/> Synchronize with computer time	
Date	2021-09-01
Time	17:37:36
<input type="radio"/> Set manually	
2021-09-01 09:37:32	
Time Format	24-Hour
Save	

3.1.3 Local Config

Go to *Config* → *System* → *Local Config* to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable audio in the recorded files.

Picture Path	C:\Program Files\NetAIIPCcamera	Browse
Record Path	C:\Program Files\NetAIIPCcamera	Browse
Video Audio Settings	<input type="radio"/> Open	<input checked="" type="radio"/> Close
Show Bitrate	<input type="radio"/> Open	<input checked="" type="radio"/> Close
Local Smart Snapshot Storage	<input type="radio"/> Open	<input checked="" type="radio"/> Close
Save		

Show Bitrate: enable or disable bitrate display in the live video.

Additionally, “Local smart snapshot storage” can be enabled or disabled here. If enabled, the captured pictures triggered by smart events (like line crossing detection, region intrusion, etc.) will be saved to the local PC.

Note: when you access your camera by the web browser without the plug-in, only Show Bitrate can be set in the above interface.

3.1.4 Storage

Go to *Config* → *System* → *Storage* to go to the interface as shown below.

You can view the capacity information of the SD card, such as picture remaining space, record remaining space, remaining space of maintenance information, etc.

Management	Record	Snapshot
Total picture capacity	<input type="text" value="2839 MB"/>	
Picture remaining space	<input type="text" value="2838 MB"/>	
Total recording capacity	<input type="text" value="25472 MB"/>	
Record remaining space	<input type="text" value="25472 MB"/>	
Total capacity of maintenance	<input type="text" value="0 MB"/>	
Remaining space of maintenance	<input type="text" value="0 MB"/>	
State	<input type="text" value="Normal"/>	
Snapshot Quota	<input type="text" value="10"/> %	
Video Quota	<input type="text" value="90"/> %	
Changes in the quota ratio need to be formatted before they become effective.		
<input type="button" value="Eject"/> <input type="button" value="Format"/>		

● **SD Card Management**

Click the “Format” button to format the SD card. All data will be cleared by clicking this button.

Click the “Eject” button to stop writing data to SD card. Then the SD card can be ejected safely.

Snapshot Quota: Set the capacity proportion of captured pictures on the SD card.

Video Quota: Set the capacity proportion of record files on the SD card.

● **Schedule Recording Settings**

1. Go to *Config* → *System* → *Storage* → *Record* to go to the interface as shown below.


Management	Record	Snapshot
Record Parameters		
Record Stream	<input type="text" value="Main stream"/>	
Pre Record Time	<input type="text" value="No Pre Record"/> (H264,H265,MJPEG)	
Cycle Write	<input type="text" value="Yes"/>	
Timing		
<input type="checkbox"/> Enable Schedule Record		

2. Set record stream, pre-record time, cycle writing.

Pre Record Time: Set the time to record before the actual recording begins.

Overwrite (Cycle Write): the earliest record data will be replaced by the latest when the disks are full.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.

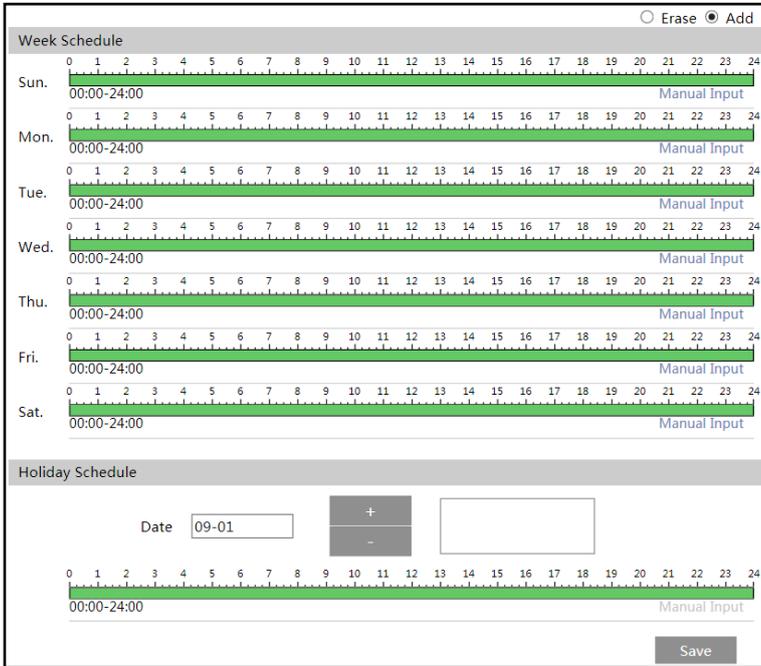

Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided into one-hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

Day schedule

Set the alarm time for a special day, such as a holiday.

Note: Holiday schedule takes priority over weekly schedule.

● **Snapshot Settings**

Go to *Config* → *System* → *Storage* → *Snapshot* to go to the interface as shown below.

Management	Record	Snapshot
Snapshot Parameters		
Image Format	JPEG ▾	
Resolution	1280x720 ▾	
Image Quality	Low ▾	
Event Trigger		
Snapshot Interval	1	Second
Snapshot Quantity	5	
Timing		
<input type="checkbox"/> Enable Timing Snapshot		
Snapshot Interval	5	Second

Set the format, resolution and quality of the image saved on the SD card and the snapshot interval and quantity and the timing snapshot here.

Snapshot Quantity: The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.


Scheduled Snapshot: Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of the schedule are the same as the schedule recording (See [Schedule Recording](#)).

3.2 Image Configuration

3.2.1 Display Configuration

Go to *Image* → *Display* interface as shown below. The image's brightness, contrast, hue and saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly seen by switching the configuration file.

Note: the camera parameters of different cameras may be slightly different. The following pictures and descriptions are for reference only.

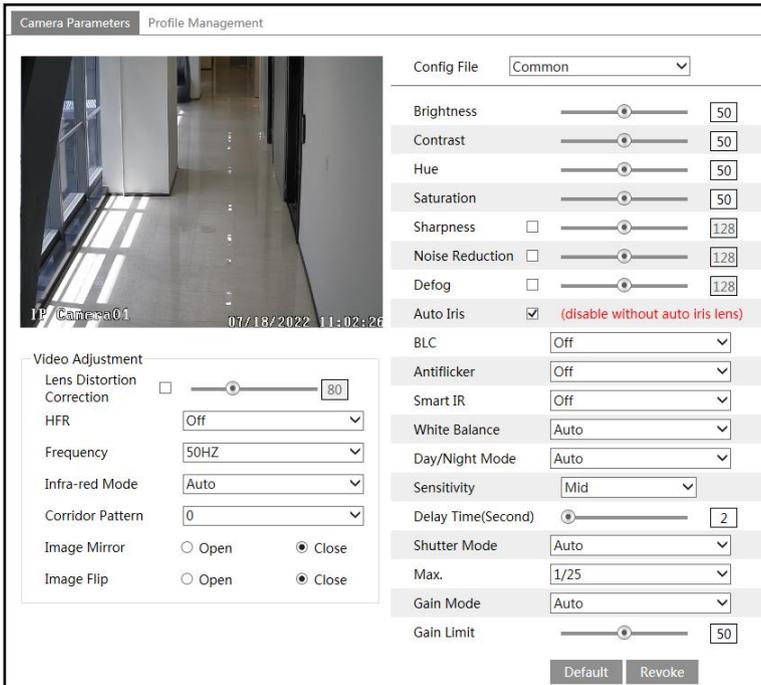

Brightness: Set the brightness level of the camera’s image.

Contrast: Set the color difference between the brightest and darkest parts.

Hue: Set the total color degree of the image.

Saturation: Set the degree of color purity. The purer the color, the brighter the image is.

Sharpness: Set the resolution level of the image plane and the sharpness level of the image edge.

Noise Reduction: Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

Defog: Activating this function and setting an appropriate value as needed in foggy, dusty, smoggy or rainy environments to get clear images.

Auto Iris: If your camera is auto Iris, please enable it.

Backlight Compensation (BLC):

- Off: disables the backlight compensation function. It is the default mode.
- HWDR: WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area.

Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode.

- HLC: lowers the brightness of the entire image by suppressing the brightness of the image’s bright area and reducing the size of the halo area.
- BLC: If enabled, the auto exposure will activate according to the scene so that the object

of the image in the darkest area will be seen clearly.

Antiflicker:

- Off: disables the anti-flicker function. This is used mostly in outdoor installations.
- 50Hz: reduces flicker in 50Hz lighting conditions.
- 60Hz: reduces flicker in 60Hz lighting conditions.

Smart IR: Choose “ON” or “OFF”. This function can effectively avoid image overexposure to make the image more realistic. The higher the level is, the more overexposure compensation will be given.

White Balance: Adjust the color temperature according to the environment automatically.

Day/Night Mode: Choose “Auto”, “Day”, “Night” or “Timing”.

If “Timing” is selected, you need to set daytime and night time. For example: if “Daytime” is set to “7:00”, the camera will switch to Day mode at 7:00 o’clock; if “Night time” is set to “17:00”, the camera will switch from Day mode to Night mode at 17:00 o’clock.

Shutter Mode: Choose “Auto” or “Manual”. If manual is chosen, the digital shutter speed can be adjusted.

Gain Mode: Choose “Auto” or “Manual”. If “Auto” is selected, the gain value will be automatically adjusted (within the set gain limit value) according to the actual situation. If “Manual” is selected, the gain value shall be set manually. The higher the value is, the brighter the image is.

Lens Distortion Correction: When the image appears distortion to some extent, please enable this function and adjust the level according to the actual scene to correct the distortion.

EIS: Electronic image stabilization; increase the stability of video image by using jitter compensation technology. (Only some models support this function)

HFR: High Frame Rate. If “ON” is selected, the system will restart and then the maximum value of the frame rate of the main stream can be set to 60 fps /50fps. (Only some models support this function)

Frequency: 50Hz and 60Hz can be optional.

Infrared Mode: Choose “Auto”, “ON” or “OFF”.

Corridor Pattern: Corridor viewing modes can be used for situations such as long hallways. 0, 90, 180 and 270 are available. The default value is 0.

Image Mirror: Turn the current video image horizontally.

Image Flip: Turn the current video image vertically.


Note: For some items (like HWDR), if selected/enabled, the camera will reboot automatically. After that, clicking “Default” button will not take effect.

Schedule Settings of Image Parameters:

Click the “Profile Management” tab as shown below.



Set full time schedule for common, auto mode and specified time schedule for day and night. Choose “Timing” in the drop-down box of schedule as shown below.

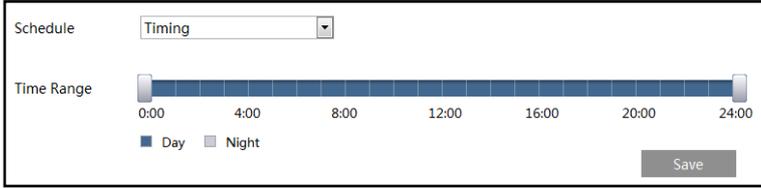


Drag “” icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to schedule, the image configuration mode will automatically switch between day and night according to the schedule.

3.2.2 Video / Audio Configuration

Go to **Image** → **Video / Audio** interface as shown below. In this interface, set the resolution, frame rate, bitrate type, video quality and so on subject to the actual network condition.

Note: the video stream parameters of different camera series may be different. The following pictures and descriptions are for reference only.

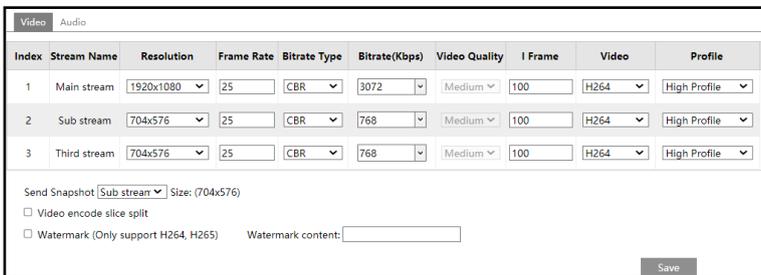

Three video streams can be adjustable.

Resolution: The size of image.

Frame rate: The higher the frame rate, the video is smoother.

Bitrate type: CBR and VBR are optional. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes.

For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This can help optimize the network bandwidth usage.

Bitrate: it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.

Video Quality: It can be adjusted when the mode is set to VBR. The higher the image quality, the more bitrate will be required.

I Frame interval: It determines how many frames are allowed between a “group of pictures”. When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much movement in the scene, setting the value higher than the frame rate is fine, potentially resulting in less bandwidth usage. However, if the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.

Video Compression: MJPEG, H264+, H264, H265 or H265+ can be optional. MJPEG is not available for main stream. If H.265/H.265+ is chosen, make sure the client system can decode H.265/H.265+. Compared to H.265, H.265+ saves more storage space with the same maximum bitrate in most scenes. Compared to H.264, H.265 reduces the transmission bitrate under the same resolution, frame rate, and image quality.

Note: When video compression is set to H264+/H265+, the bitrate type will be switched to VBR by default.


Profile: For H.264. Baseline, main and high profiles are selectable.

Send Snapshot: Set the snapshot stream.

Video encode slice split: If this function is enabled, smooth image can be gotten even though using the low-performance PC.

Watermark: When playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Click the “Audio” tab to go to the interface as shown below.

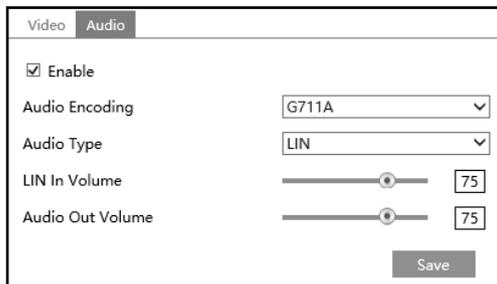

Audio Encoding: G711A and G711U are selectable.

Audio Type: MIC or LIN. (If the internal MIC is used, choose “MIC”. If you want to use an external line-level audio input device, choose “LIN”.)

LIN IN/MIC IN Volume: LIN IN Volume can be set here. If MIC is selected, MIC IN volume can be set.


Audio Out Volume: This function is available for the model with audio out interface.

3.2.3 OSD Configuration

Go to *Image* → *OSD* interface as shown below.



Set time stamp, device name, OSD content and picture overlap here. After enabling the corresponding display and entering the content, drag them to change their position. Then click the “Save” button to save the settings.

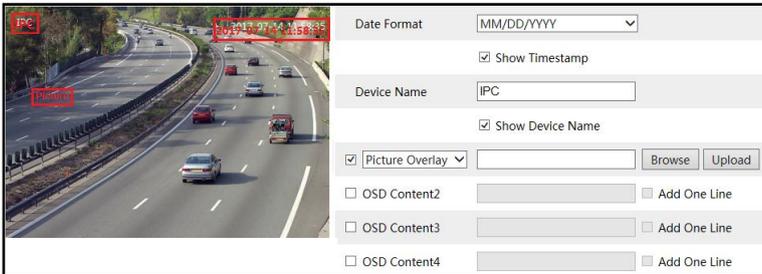


Picture Overlay Settings:

Check “OSD Content1”, choose “Picture Overlay” and click “Browse” to select the overlap picture. Then click “Upload” to upload the overlapping picture. The pixel of the image shall not exceed 200*200, or it cannot be uploaded.


3.2.4 Video Mask

Go to *Image* → *Video Mask* interface as shown below. A maximum of 4 zones can be set up.

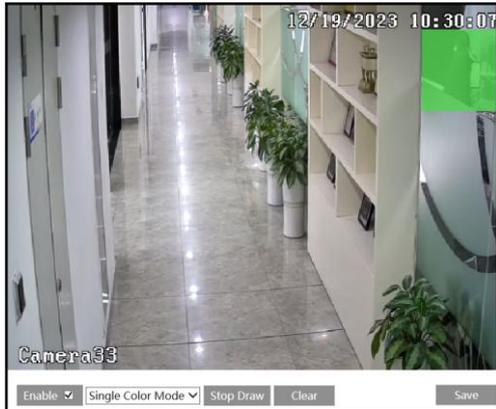

To set up a video mask:

1. Enable video mask.
2. Click the “Draw Area” button and then drag the mouse to draw the video mask area.
3. Click the “Save” button to save the settings.
4. Return to the live to verify that the area has been drawn as shown as blocked out in the image.

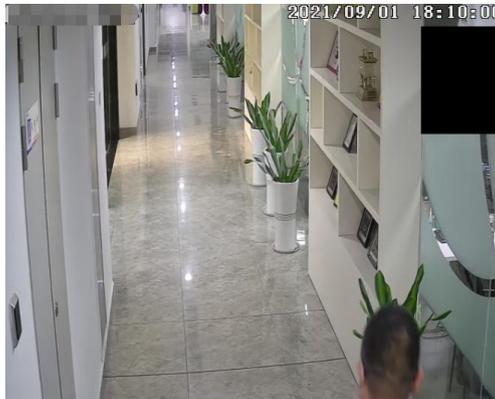


To clear the video mask:

Click the “Clear” button to delete the current video mask area.

3.2.5 ROI Configuration

Go to Image→ROI Config interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

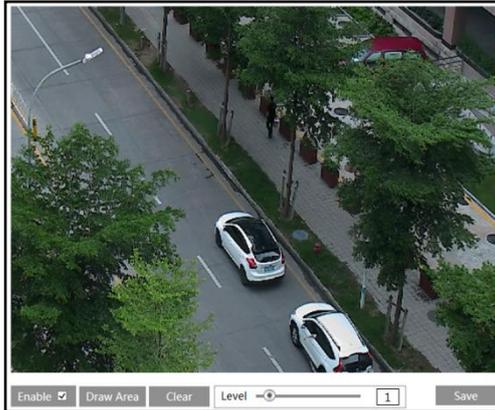


1. Check “Enable” and then click the “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click the “Save” button to save the settings.



3.2.6 Lens Control

This function is only available for the model with a motorized zoom lens. Within this section, zoom and focus can be controlled. If the image is out of focus after a manual adjustment, one key focus can be used to set the focus automatically. Go to *Config* → *Image* → *Zoom/Focus* interface to set.

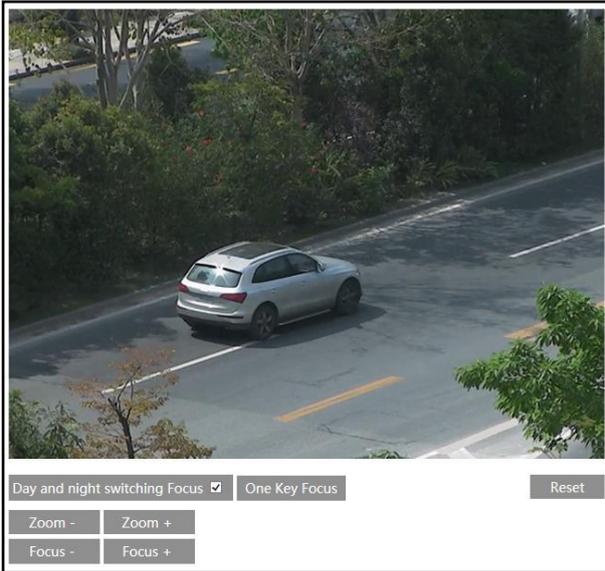

3.3 PTZ Configuration

This function is only available for the model with RS485 interface. It can be used with a compatible external PTZ enclosure. Go to **PTZ** → **Protocol** interface as shown below.

Protocol	PELCOD ▼
Address	1
Baud-Rate	2400 ▼
Save	

3.4 Alarm Configuration

3.4.1 Motion Detection

Go to **Alarm** → **Motion Detection** interface to set motion detection alarm.

The screenshot shows a web interface for configuring motion detection. At the top, there are three tabs: 'Detection Config' (selected), 'Area and Sensitivity', and 'Schedule'. Below the tabs, there is a section for 'Enable' with a checked checkbox. Underneath is the 'Alarm Holding Time' set to '20 Seconds' with a dropdown arrow. A section titled 'Trigger Alarm Out' contains a large empty rectangular box and a checkbox labeled 'Alarm Out'. Below this are four more checkboxes: 'Trigger SD Card Snapshot', 'Trigger SD Card Recording', 'Trigger Email', and 'Trigger FTP'. At the bottom center is a 'Save' button.

1. Check the “Enable” check box to activate motion based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or CMS, even if there is motion in the video.

Alarm Holding Time: it refers to the time that the alarm extends after an alarm ends. For instance, if the alarm holding time is set to 20 seconds, once the camera detects a motion, it will go to alarm and would not detect any other motion in 20 seconds. If there is another motion detected during this period, it will be considered as continuous movement; otherwise it will be considered as a single motion.

Alarm Out: If selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm. (This function is only available for the models with the alarm output interface; some models may support two alarm output interfaces).


Trigger SD Card Snapshot: If selected, the system will capture images on motion detection and save the images on an SD card.

Trigger SD Card Recording: If selected, the video will be recorded on an SD card on motion detection.

Trigger Email: If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent to those addresses.

Trigger FTP: If “Trigger FTP” and “Attach Picture” are checked, the captured pictures will be sent to FTP server address. Please refer to [FTP configuration](#) section for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

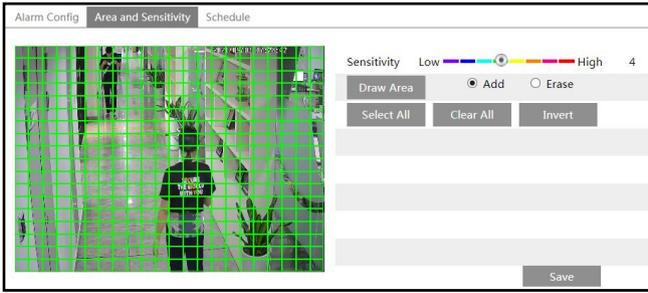

Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily.

Select “Add” and click “Draw”. Drag the mouse to draw the motion detection area; Select “Erase” and drag the mouse to clear motion detection area.


After that, click the “Save” button to save the settings.

3. Set the schedule for motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup (See [Schedule Recording](#)).

3.4.2 Exception Alarm

- **SD Card Full**

1. Go to *Config* → *Alarm* → *Exception Alarm* → *SD Card Full*.

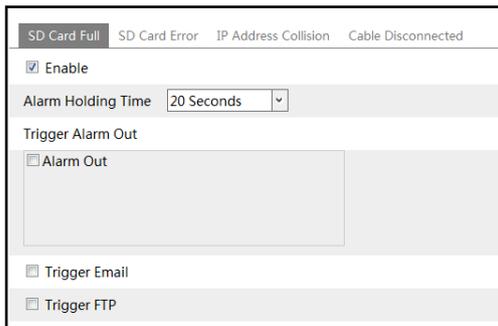


2. Click “Enable”.

3. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection section for details.

- **SD Card Error**

When there are some errors in writing to the SD card, the corresponding alarms will be triggered.


1. Go to *Config* → *Alarm* → *Exception Alarm* → *SD Card Error* as shown below.

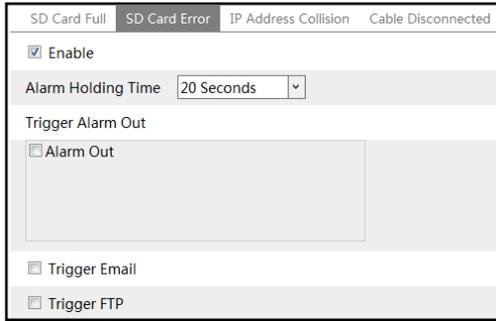

2. Click “Enable”.
3. Set the alarm holding time and alarm trigger options. Trigger alarm out, Email, and FTP. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

● **IP Address Conflict**

1. Go to *Config* → *Alarm* → *Exception Alarm* → *IP Address Collision* as shown below.

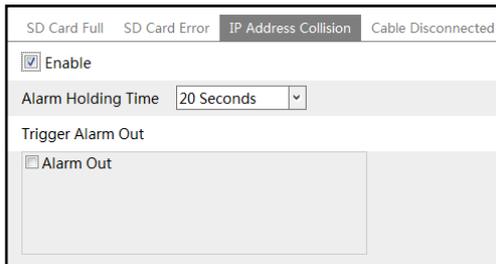


2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the IP address of the camera conflicts with the IP address of other devices, the system will trigger the alarm out.

Note: if your camera doesn’t support alarm out, you can go to *Config* → *Maintenance* → *Operation Log* interface to check the relevant alarm information after enabling this function.

● **Cable Disconnection**


1. Go to *Config* → *Alarm* → *Exception Alarm* → *Cable Disconnected* as shown below.

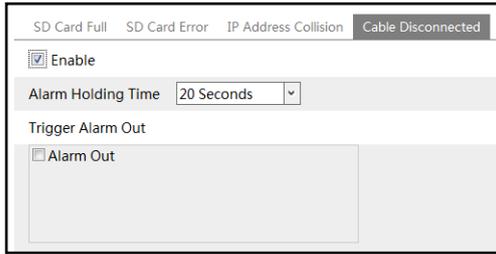

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out. **Note:** if your camera doesn’t support alarm out, you can go to **Config → Maintenance → Operation Log** interface to check the relevant alarm information after enabling this function.

3.4.3 Alarm In

This function is only available for some models. To set sensor alarm (alarm in): Go to **Config → Alarm → Alarm In** interface as shown below.

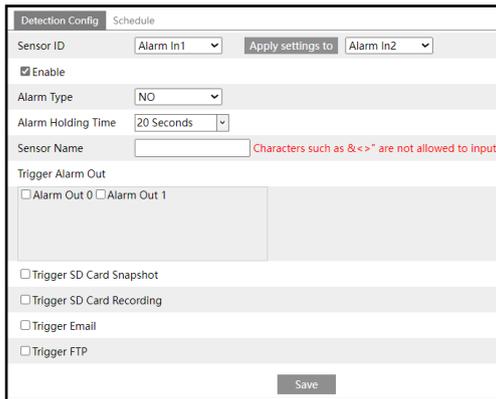

1. Click “Enable” and set the alarm type, alarm holding time and sensor name.
 2. Set alarm trigger options.
- Alarm Out:** If selected, this would trigger an external relay output that is connected to the camera when the sensor alarm is triggered (This function is only available for the models with the alarm output interface; some models may support two alarm output interfaces).
- Trigger SD Card Snapshot:** If selected, the system will capture images when the sensor alarm is triggered and save the images on an SD card.
- Trigger SD Card Recording:** If selected, the video will be recorded on an SD card when the sensor alarm is triggered.
- Trigger Email:** If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent to those addresses.

Trigger FTP: If “Trigger FTP” and “Attach Picture” are checked, the captured pictures will be sent to FTP server address. Please refer to the FTP configuration section for more details.

3. Click the “Save” button to save the settings.

4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

If there are two sensors, please select the sensor ID. Click “Apply settings to” to quickly apply the settings to the other alarm input.

3.4.4 Alarm Out

This function is only available for some models. Go to *Config* → *Alarm* → *Alarm Out*.

Alarm Out Mode: Alarm Linkage

Alarm Out Name: alarmOut1

Alarm Holding Time: 20 Seconds

Alarm Type: NC

Save

Alarm Out ID: Some models may support two alarm output interfaces. The alarm out can be set respectively by selecting alarm out ID.

Alarm Out Mode: Alarm linkage, manual operation, day/night switch linkage and timing are optional.

Alarm Linkage: Having selected this mode, select alarm out name, alarm holding time at the “Alarm Holding Time” pull down list box and alarm type.

Manual Operation: Having selected this mode, select the alarm type and click “Open” to trigger the alarm out immediately; click “Close” to stop alarm.


Alarm Out Mode: Manual Operation

Alarm Type: NC

Manual Operation: Open Close

Save

Day/Night Switch Linkage: Having selected this mode, select the alarm type and then choose to open or close alarm out when the camera switches to day mode or night mode.

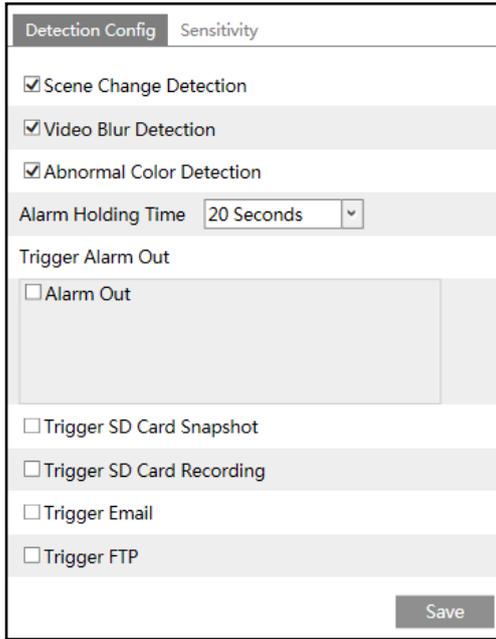

1. Enable the applicable detection that's desired.

Scene Change Detection: Alarms will be triggered if the scene of the monitor video has changed.

Video Blur Detection: Alarms will be triggered if the video becomes blurry.


Abnormal Color Detection: Alarms will be triggered if the image is abnormal caused by color deviation.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to the motion detection section for details.

Note: The alarm recording type triggered by a video exception event is “Common” . In the search interface, you can search the recorded files of video exception by selecting the “Common” event.

3. Click the “Save” button to save the settings.

4. Set the sensitivity of the exception detection. Click “Sensitivity” tab to go to the interface as shown below.

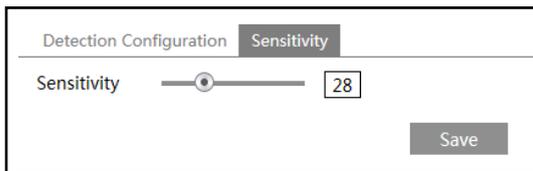

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox.

Click “Save” button to save the settings.

The sensitivity value of Scene Change Detection: The higher the value is, the more sensitive the system responds to the amplitude of the scene change.

The sensitivity value of Video Blur Detection: The higher the value is, the more sensitive the system responds to the blurriness of the image.

The sensitivity value of Abnormal Color Detection: The higher the value is, the more sensitive the system responds to the color shift of the image.

※ **The requirements of the camera and surrounding area**


1. Auto-focusing function should not be enabled for exception detection.
2. Try not to enable exception detection when light changes greatly in the scene.
3. Please contact us for more detailed application scenarios.

3.4.7 Audio Exception

Alarms will be triggered when the abnormal sound is detected in the surveillance scene, such as the sudden increase/decrease of the sound intensity.

To set audio exception detection:

1. Go to **Alarm** → **Audio Exception** interface as shown below.

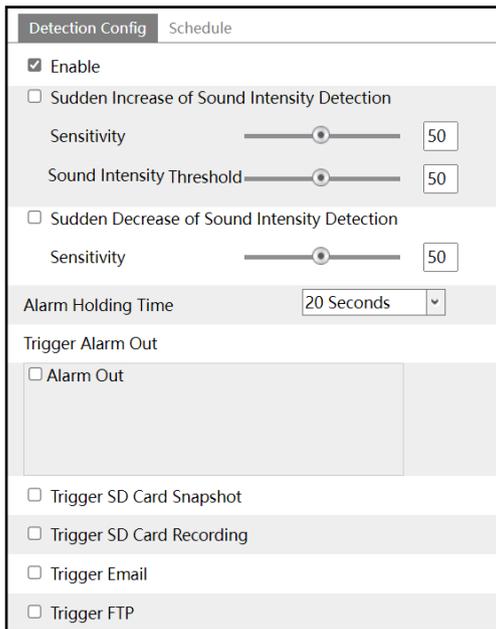

2. Enable audio exception.
3. Select the audio exception detection types.

Sudden Increase of Sound Intensity Detection: Detect sudden increase of sound intensity. If enabled, sensitivity and sound intensity threshold are configurable. Alarms will be triggered

when the detected sound intensity exceeds the sound threshold.

Sensitivity: The higher the value is, the easier the alarm will be triggered.

Sound Intensity Threshold: It is the sound intensity reference for the detection. The lower the value is, the easier the alarm will be triggered. It is recommended to set the average sound intensity in the environment. The louder the environment sounds, the higher the value should be. Please adjust it according to the actual environmental condition.

Sudden Decrease of Sound Intensity Detection: Detect sudden decrease of sound intensity. Please set the sensitivity as needed. The higher the value is, the easier the alarm will be triggered.


Real-time audio graphic:

Red wavy line stands for the current detected sound intensity.

Navy blue line stands for the environment (background) sound intensity.

Green line stands for the sound intensity threshold.

In order to reduce false alarms, it is recommended to set the sensitivity and sound intensity threshold according to the real-time audio graphic.

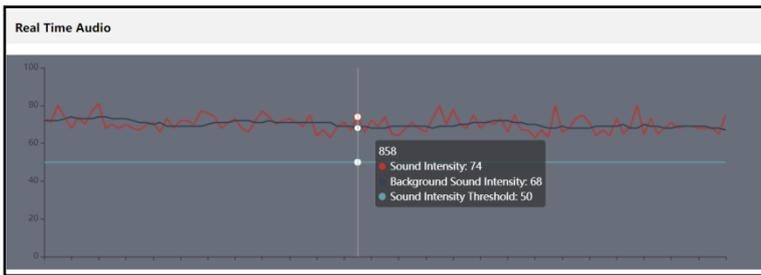

4. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

5. Set the schedule of the audio exception detection. The setup steps of the schedule are the same as the schedule recording (See [Schedule Recording](#)).

Note: The alarm recording type triggered by an audio exception event is “Common” . In the search interface, you can search the recorded files of audio exception by selecting the “Common” event.


3.5 Event Configuration

For more accuracy, here are some recommendations for installation.

- Cameras should be installed on stable surfaces, as vibrations can affect the accuracy of detection.
- Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
- Avoid places that are narrow or have too much shadowing.
- Avoid scenario where the object’s color is similar to the background color.

- At any time of day or night, please make sure the image of the camera is clear and with adequate and even light, avoiding overexposure or too much darkness on both sides.

You can enable the event type as needed. Go to *Config* → *Event* → *Enable Event* interface as shown below.

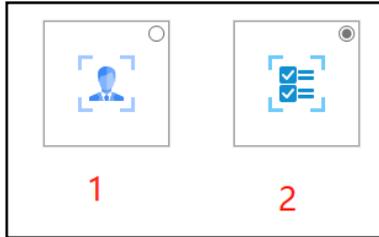

Event Type: 1- Face Event; 2- Smart Event

The default event type is smart event. If you want to switch to face event, please select face event and then click “Save”. After successful reboot, the corresponding event will be displayed. Select and set as needed.

Note: You can enable multiple smart detection events (such as line crossing detection, region intrusion detection, region exiting detection, etc.) simultaneously, but detecting multiple smart events in the same time will cause the reduction in performance and affect the detection results. Please enable smart events according to the actual performance of your camera.

3.5.1 Object Abandoned/Missing

Alarms will be triggered when the objects are removed from or left at the pre-defined area.

To set abandoned/missing object detection:

Go to *Config* → *Event* → *Object Abandoned/Missing* interface as shown below.

The screenshot shows a web interface for configuring object detection. At the top, there are three tabs: 'Detection Config' (selected), 'Area', and 'Schedule'. Below the tabs, there is a section for enabling detection with a checked 'Enable' checkbox. Two radio buttons are present: 'Enable Abandoned Object Detection' (selected) and 'Enable Missing Object Detection'. Below these, there is a 'Duration of Delay' field with the value '10' and the unit 'Second'. An 'Alarm Holding Time' dropdown menu is set to '20 Seconds'. A section titled 'Trigger Alarm Out' contains a checkbox for 'Alarm Out'. Below this, there are four more checkboxes: 'Trigger SD Card Snapshot', 'Trigger SD Card Recording', 'Trigger Email', and 'Trigger FTP'. At the bottom center, there is a 'Save' button.

1. Enable abandoned/missing object detection and then select the detection type.

Enable Abandoned Object Detection: Alarms will be triggered if there are items left in the pre-defined area.


Enable Missing Object Detection: Alarms will be triggered if items are missing in the pre-defined area.

Duration of Delay: it is the alarm delay time of the object left in the region (ranging from 10~3600s) or the alarm delay time of the object removed from the region (ranging from 3~3600s). For example, if “Enable Abandoned Object Detection” is selected and the duration of delay is set as 10, alarms will be triggered after the object is left and stay in the region for 10s, but when someone takes away the object within 10s, alarms will not be triggered.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

3. Click the “Save” button to save the settings.

4. Set the alarm area of the abandoned/missing object detection. Click the “Area” tab to go to the interface as shown below.

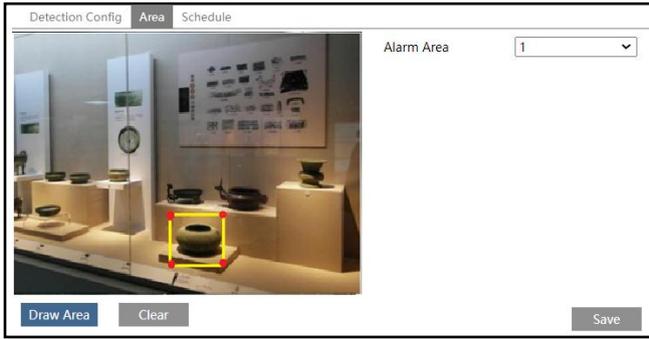

Set the alarm area number and then enter the desired alarm area name. Only one alarm area can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

5. Set the schedule of the abandoned/missing object detection. The setup steps of the schedule are the same as the schedule recording (See [Schedule Recording](#)).

※ The Configuration requirements of the camera and surrounding areas

1. The range of the detection object should occupy from 1/50 to 1/3 of the entire image.
2. The detection time of objects in the camera shall be from 3 to 5 seconds.
3. The defined area cannot be covered frequently and continuously (like people and traffic flow).
4. It is necessary for missing object detection that the drawn frame must be very close to the margin of the object in enhancing the sensitivity and accuracy of the detection.
5. Abandoned/missing object detection cannot determine the objects’ ownership. For instance, there is an unattended package in the station. Abandoned object detection can detect the package itself but it cannot determine to whom it belongs to.
6. Try not to enable abandoned/missing object detection when light changes greatly in the scene.
7. Try not to enable abandoned/missing object if there are complex and dynamic environments in the scene.
8. Adequate light and clear scenery are very important to abandoned/missing object detection.

3.5.2 Line Crossing

Line Crossing: Alarms will be triggered if the target crosses the pre-defined alarm lines. Go to *Config* → *Event* → *Line Crossing* interface as shown below.

1. Enable line crossing alarm and select the snapshot type and the detection target.

Save Original Picture to SD Card: If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets cross the alarm line.

Save Target Picture to SD Card: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets cross the alarm line.

Note: To save snapshots to the local PC, please enable “Local Smart Snapshot Storage” in the local config interface first. To save snapshots to the SD card, please install an SD card first.

Detection Target:

People: Select it and then alarms will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) crosses the pre-defined alarm lines.

Motorcycle/Bicycle Vehicle: Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) crosses the pre-defined alarm lines.


All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Click the “Save” button to save the settings.

5. Set area of the line crossing alarm. Click the “Area” tab to go to the interface as shown below.

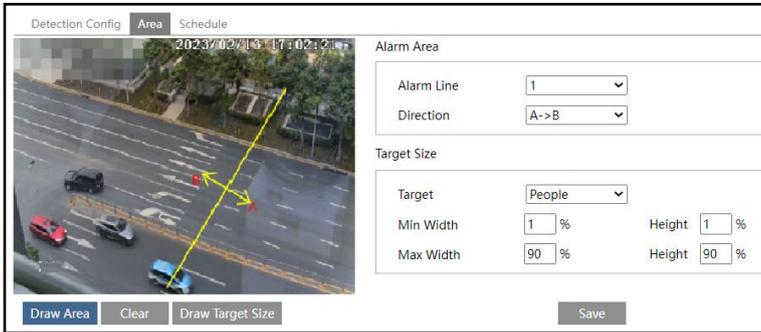

Set the alarm line number and direction. Up to 4 lines can be added. Multiple lines cannot be added simultaneously.

Direction: A<->B, A->B and A<-B optional. This indicates the direction of the intruder/vehicle crosses over the alarm line.

A<->B: The alarm will be triggered when the intruder/vehicle crosses over the alarm line from B to A or from A to B.

A->B: The alarm will be triggered when the intruder/vehicle crosses over the alarm line from A to B.

A<-B: The alarm will be triggered when the intruder/vehicle crosses over the alarm line from B to A.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Clear” button to delete the lines. Click the “Save” button to save the settings.

To set target size:

Click “Draw Target Size” to draw the maximum and minimum size of a specific target as shown below.

Target: choose “People”, “Motor Vehicle” or “Motorcycle/Bicycle” as needed.

Green box is the maximum target detection box; yellow box is the minimum target detection box.

Click the green box to edit the maximum target detection box; click the yellow box to edit the minimum target detection box.

Drag one of four corners of the green or yellow box to change the box size. The corresponding size value on the right will be changed too. You can also enter the digital number to directly change the box size.

Click and drag the green or yellow box to move its position.

Finally, click “Save” to save the settings.

After the target size range is set, only the target whose size is between the minimum value and the maximum value can be detected.



6. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup (See [Schedule Recording](#)).

※ **Configuration requirements of the camera and surrounding area**

1. Auto-focusing function should not be enabled for line crossing detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. The recommended depression angle of the camera is from 30° to 45° (See [Outdoor Mounting](#) example).

For pedestrians, their heads and main bodies should be clearly visible on a video.



For vehicles, the depression angle should not be more than the recommended value. The sideways or horizontal viewing angle is recommended on a video (see below).




5. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
6. Adequate light and clear scenery are crucial for event detection.

7. Please adjust the installation position or focus to meet the requirements of the target recognition size.

The recommended target recognition size:

Percentage	People	Motor Vehicle	Motorcycle/Bicycle
Minimum (Width × Height)	4% × 8%	8% × 8%	4% × 4%
Maximum (Width × Height)	50% × 50%	50% × 50%	50% × 50%

Note: The percentage means that a target occupies the percentage of the entire image. For example: In a 1080P(1920×1080) video image, the minimum resolution of human is 80×160 (w = 1920×4%=80, h=1920×8%=160)

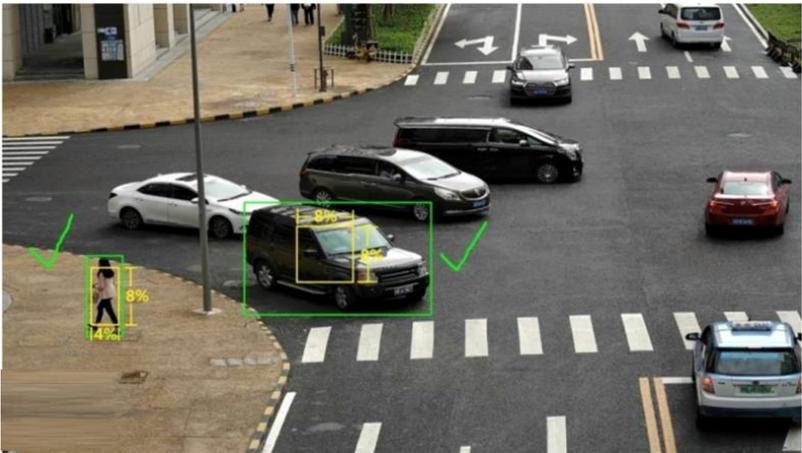

Correct example

The target recognition box meets the requirements of the minimum size. The yellow box stands for the minimum recognition size. The green box stands for the set target box.



Wrong example


The yellow box stands for the minimum recognition size. The green box stands for the set target box. These two target recognition boxes don't meet the requirement of the minimum size. Therefore, you need to adjust the camera position or focus as needed.

8. Installation suggestion:

Outdoor mounting:


The optimal detection distance varies due to different focal length. Please refer to the following table.

Focal Length	Installation Height(m)	People/Motorcycle/Bicycle		Motor Vehicle	
		Maximum Distance(m)	Optimal Distance(m)	Maximum Distance(m)	Optimal Distance(m)
2.8mm	3-10	8	4-8	15	10-15
3.6mm	3-10	10	5-10	20	15-20
12mm	3-10	25	10~20	35	15~30
22mm	3-10	45	30~40	70	20~50

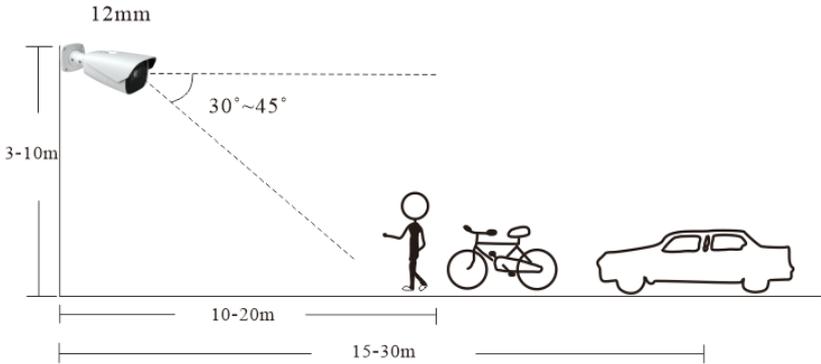

Example for 12mm focal length

Indoor Mounting

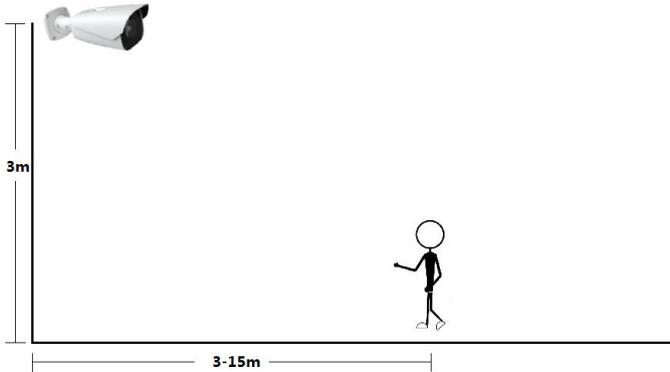

3.5.3 Region Intrusion

Region Intrusion: Alarms will be triggered if the target intrudes into the pre-defined areas. This function can be applicable to important supervision places, danger areas and restricted areas, like military administrative zones, high danger areas, etc.

Go to *Config* → *Event* → *Region Intrusion* interface as shown below.

The screenshot shows the 'Detection Config' interface with the following settings:

- Enable:**
- Save Original Picture To SD Card:**
- Save Target Picture To SD Card:**
- Detection target and sensitivity:**
 - Target:**
 - People
 - Motor Vehicle
 - Motorcycle/Bicycle
 - Sensitivity:** Three sliders, each set to 50.
- Alarm Holding Time:** 20 Seconds
- Trigger Alarm Out:** Alarm Out
- Trigger SD Card Snapshot:**
- Trigger SD Card Recording:**
- Trigger Email:**
- Trigger FTP:**

A 'Save' button is located at the bottom right of the interface.

1. Enable intrusion detection and select the snapshot type and the detection target.

Save Original Picture to SD Card: If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets intrude into the pre-defined areas.

Save Target Picture to SD Card: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets intrude into the pre-defined areas.

Note: To save snapshots to the local PC, please enable “Local Smart Snapshot Storage” in the local config interface first. To save snapshots to the SD card, please install an SD card first.

Detection Target:

People: Select it and then alarms will be triggered if someone intrudes into the pre-defined area.

Motor Vehicle: Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) intrudes into the pre-defined area.

Motorcycle/Bicycle Vehicle: Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) intrudes into the pre-defined area.


All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if intrusion detection is enabled.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Click the “Save” button to save the settings.

5. Set alarm areas and target size for region intrusion detection. Click the “Area” tab to go to the interface as shown below.

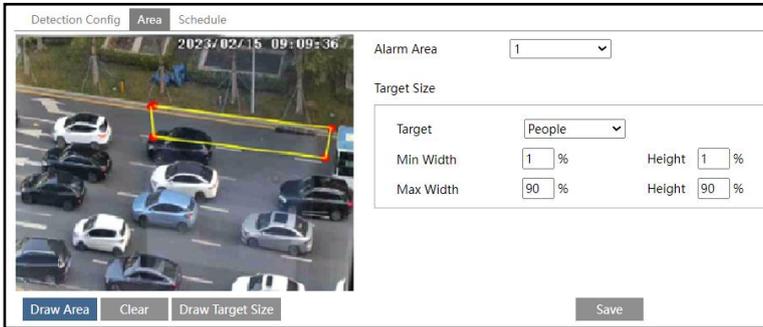

Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

Target size setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).

6. Set the schedule of region intrusion detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

※ **Configuration requirements of the camera and surrounding area**

The requirements are similar to line crossing detection. Please refer to [Configuration requirements of camera and surrounding area](#) of line crossing detection for details.

3.5.4 Region Entrance

Region Entrance: Alarms will be triggered if the target enters the pre-defined areas.

Go to *Config* → *Event* → *Region Entrance* interface.

1. Enable region entrance detection and select the snapshot type and the detection target.
2. Set the alarm holding time and alarm trigger options.
3. Set alarm areas and target size for region entrance detection.
4. Set the schedule of region entrance detection.

The setup steps of the region entrance detection are the same as the region intrusion detection setup (See [Region Intrusion](#) for details).

3.5.5 Region Exiting

Region Exiting: Alarms will be triggered if the target exits from the pre-defined areas.

Go to *Config* → *Event* → *Region Exiting* interface.

1. Enable region exiting detection and select the snapshot type and the detection target.

2. Set the alarm holding time and alarm trigger options.
3. Set alarm areas and target size for region exiting detection.
4. Set the schedule of region exiting detection.

The setup steps of the region exiting detection are the same as the region intrusion detection setup (See [Region Intrusion](#) for details).

3.5.6 Target Counting by Line

This function is used to detect, track and count the number of people or vehicles crossing the set alarm line.

1. Go to **Config** → **Event** → **Target Counting by Line** as shown below.

The screenshot shows the configuration page for 'Target Counting by Line'. At the top, there are tabs for 'Detection Config', 'Area', and 'Schedule'. The 'Detection Config' tab is active. The page contains several sections:

- Enable:** A checked checkbox.
- Save Original Picture To SD Card:** An unchecked checkbox.
- Save Target Picture To SD Card:** An unchecked checkbox.
- Detection target and sensitivity:** A section with three rows. Each row has a checked checkbox for a target type, a slider for sensitivity (set to 50), and a 'Staying Threshold' input field (set to 0). The target types are 'People', 'Motor Vehicle', and 'Motorcycle/Bicycle'.
- Delay alarm duration:** A dropdown menu set to '0 Seconds'.
- Counting Reset:** A section with a 'Timing' dropdown set to 'Off' and a 'Manual' button labeled 'Reset'.
- Alarm Holding Time:** A dropdown menu set to '20 Seconds'.
- Trigger Alarm Out:** A section with an unchecked checkbox labeled 'Alarm Out'.
- Trigger SD Card Snapshot:** An unchecked checkbox.
- Trigger SD Card Recording:** An unchecked checkbox.
- Trigger Email:** An unchecked checkbox.
- Trigger FTP:** An unchecked checkbox.

2. Enable target counting by line and select the snapshot type and the detection target.

Detection Target: Select the target to calculate. People, motor vehicle and motorcycle/bicycle can be selected.


Staying Threshold: When the targets (people/vehicles) staying in the specified area exceed the threshold, alarms will be triggered.

Delay Alarm Duration: The duration time that the number of targets exceeds the staying threshold. Alarms will not be triggered even if the targets staying in the specified area exceed the threshold within the set delay alarm duration. But if you set it to “0”, alarms will be triggered immediately when the targets staying in the specified area exceed the threshold.

Counting Reset: You can choose to reset the counting daily, weekly or monthly. The current number of people/cars/bikes counted will be cleared immediately when you click the “Reset” button.

3. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Set alarm lines and target size. Click the “Area” tab to go to the interface as shown below.

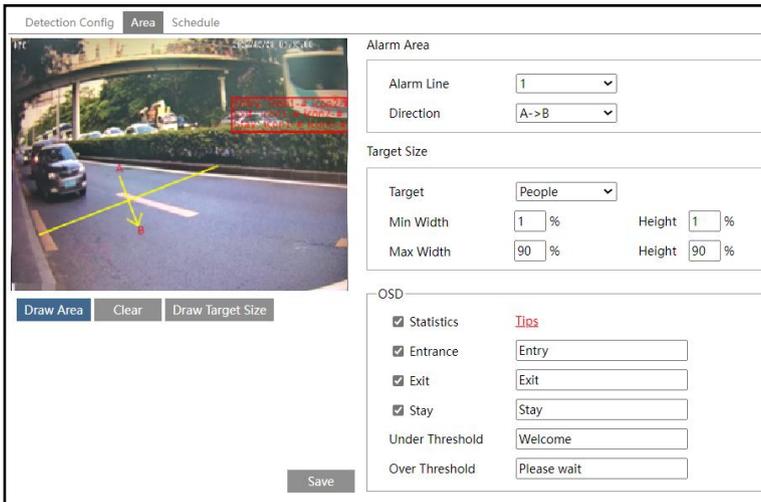

Set the alarm line number and direction. Only one alarm line can be added.

Direction: A->B and A<-B can be optional. The direction of the arrow is entrance.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Clear” button to delete the lines.

Target size setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).

Statistics: If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface.

Check “Statistics” and then move the red box to change the position of the statistical information displayed on the screen.

The statistical OSD information can be customized as needed.

Note: When target counting by line and by area are enabled simultaneously, the OSD position shown in the image depends on the OSD position of target counting by area.

Click the “Save” button to save the settings.

5. Set the schedule of target counting by line. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

6. View the statistical information in the live view interface.




7. View the statistical information of target counting by line. Click “Statistics” to enter the following interface.

Index	Count Time	People	Motor Vehicle	Motorcycle/Bicycle
1	2023-12-19 00:00:00 – 2023-12-19 00:59:59	19	0	0
2	2023-12-19 01:00:00 – 2023-12-19 01:59:59	0	0	0
3	2023-12-19 02:00:00 – 2023-12-19 02:59:59	0	0	0

Select the report type. Daily report, weekly report, monthly report and annual report are selectable.

Select the count type. Enter or leave can be optional.

Select the start time and then click “Count”. Then the counting result will be displayed in the statistic result area. Click Table or Chart to display the result in different way.

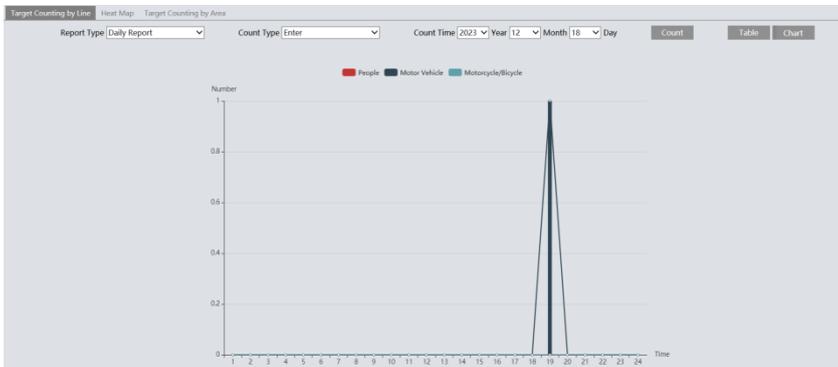


※ **Configuration requirements of the camera and surrounding area**

The requirements are similar to line crossing detection. Please refer to [Configuration requirements of the camera and surrounding area](#) of line crossing detection for details.

3.5.7 Target Counting by Area

This function is used to detect, track and count the number of people or vehicles intruding into a pre-defined area.

1. Go to *Config* → *Event* → *Target Counting by Area*.
2. Enable target counting by area, select the snapshot type, the detection target, counting reset and alarm linkages. The setup steps are the same as the target counting by line.
3. Set the statistic area. Click the “Area” tab to go to the interface as shown below.

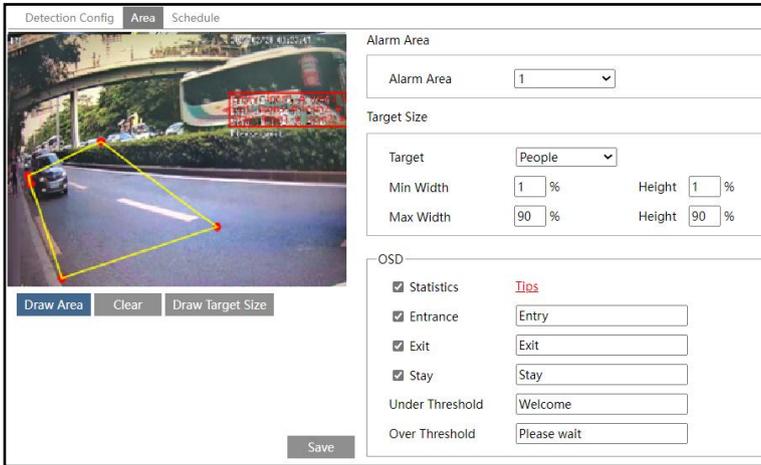

Select the alarm area number on the right side. Only one alarm area can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

Target size setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).


Statistics: If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface. Check “Statistics” and then move the red box to change the position of the statistical information displayed on the screen.

The statistical OSD information can be customized as needed.

4. Set the schedule of target counting by area. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).
5. View the statistical information in the live view interface.



Note: When target counting by line and by area are enabled simultaneously, the OSD position shown in the image depends on the OSD position of target counting by area.

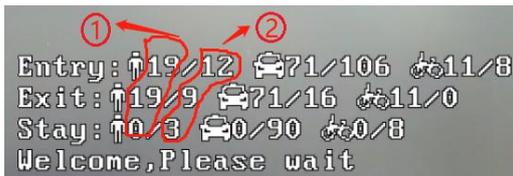

① : the statistical number of target counting by area

② : the statistical number of target counting by line

Each line of the above OSD information (including OSD content, colon, slashes and images) cannot exceed 37 characters, or some data will not be displayed completely.

6. View the statistical information of target counting by area. Click Statistics→Target Counting by Area to enter the following interface.

Report Type: Daily Report		Count Type: Enter	Count Time: 2023-12-19 12:00:00 - 2023-12-19 00:00:00			Count	Table	Chart
Index	Count Time	People	Motor Vehicle	Motorcycle/Bicycle				
1	2023-12-19 00:00:00 - 2023-12-19 00:59:59	19	0	0				
2	2023-12-19 01:00:00 - 2023-12-19 01:59:59	0	0	0				
3	2023-12-19 02:00:00 - 2023-12-19 02:59:59	0	0	0				

Please select report type, count type and start time as needed. Then click “Count” to search the statistic result. Click “Chart” to view the statistic result intuitively.


※ **Configuration requirements of the camera and surrounding area**

The requirements are similar to line crossing detection. Please refer to [Configuration requirements of the camera and surrounding area](#) of line crossing detection for details.

3.5.8 Heat Map

Heat Map is to display the flow distribution of people/vehicles in pre-defined areas by different colors.

1.Enable Heat Map, set snapshot type and detection target type as needed.

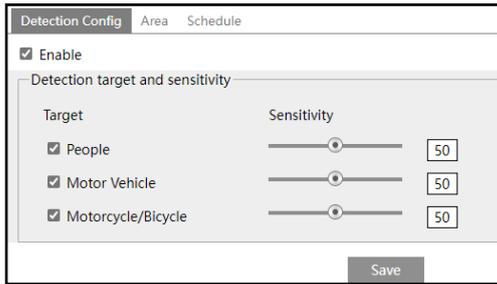

2. Set heat map display area and target size. Up to 4 areas can be set.



Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

Target size setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).

3. Set the schedule of a heat map. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

4. View the heat map data (click Statistics→Heat Map). Set the start time and the end time. Click “Count” to view the heat map as shown below. The default heat map is people flow data display. Click “Motor Vehicle” or “Motorcycle/bicycle” to view the corresponding data.



3.5.9 Loitering Detection

Loitering Detection: when someone entering and loitering in a pre-defined area exceeds the threshold, alarms will be triggered until the object leaves this area.

Go to **Event** → **Loitering Detection** interface as shown below. The setting steps are as follows:

1. Enable loitering detection and select the snapshot type.

Detection Config
Area
Schedule

Enable

Save Original Picture To SD Card

Save Target Picture To SD Card

Sensitivity

50

Time Threshold 10 Second

Alarm Holding Time 20 Seconds v

Trigger Alarm Out

Alarm Out

Trigger SD Card Snapshot

Trigger SD Card Recording

Trigger Email

Trigger FTP

Save

2. Set sensitivity, time threshold and alarm holding time.

Sensitivity: The higher the value is, the easier the alarm can be triggered.

Time Threshold: the time that a person is allowed to stay in the area. If a person staying and moving in the specified area exceeds the threshold, alarms will be triggered until this person

leaves or stops moving.

For example: Set the threshold to “60seconds”; when a person staying and moving in the specified area exceeds 60seconds, an alarm is triggered and continues. 2 minutes later, this person stops moving in the specified area, and then the alarm stops. However, the alarm will continue once this person moves again in the specified area unless the person leaves this area.

Alarm Holding Time: it is the time that the alarm extends after an alarm ends.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.
4. Click the “Save” button to save the settings.
5. Set alarm areas and target size. Click the “Area” tab to go to the interface as shown below.



Select the alarm area number on the right side. Four alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

Target size setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).

6. Set the schedule of loitering detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

✳ **Configuration requirements of the camera and surrounding area**

1. Avoid enabling this function in complex scenes, such as a scene with a large flow of people and vehicles.
2. Other requirements are similar to line crossing detection. Please refer to [Configuration requirements of the camera and surrounding area](#) of line crossing detection for details.

3.5.10 Illegal Parking Detection

Illegal Parking Detection: when a vehicle (like a car, truck, motorcycle, etc.) staying in a no-parking zone exceeds the threshold, alarms will be triggered until the vehicle is driven away.

Go to **Event** → **Illegal Parking Detection**. The setting steps are as follows:

1. Enable illegal parking detection and select the snapshot type.

The screenshot shows the 'Detection Config' interface with the following settings:

- Enable:**
- Save Original Picture To SD Card:**
- Save Target Picture To SD Card:**
- Detection target and sensitivity:**
 - Target:**
 - Motor Vehicle
 - Motorcycle/Bicycle
 - Sensitivity:** Two sliders, both set to 50.
- Time Threshold:** 10 Second
- Alarm Holding Time:** 20 Seconds
- Trigger Alarm Out:** Alarm Out
- Trigger SD Card Snapshot:**
- Trigger SD Card Recording:**
- Trigger Email:**
- Trigger FTP:**
- Save:** Button at the bottom.

2. Set the detection target, sensitivity, time threshold and alarm holding time.

Motor Vehicle: a vehicle with four or more wheels

Motorcycle/Bicycle Vehicle: a vehicle with two wheels (eg. a motorcycle or bicycle)

Sensitivity: the higher the value is, the easier the alarm can be triggered.


Time Threshold: the time that a vehicle is allowed to stay in the specified area. If a vehicle staying in the area exceeds the threshold, alarms will be triggered until it is driven away. For example, the time threshold is set to 30s. When the system detects a vehicle stopping in the set no-parking zone, it will start counting. Alarms will be triggered after it stays for more than 30s. And the illegal parking alarm will not stop until the vehicle is driven away from the non-parking zone.

Alarm Holding Time: this is the time that the alarm extends after the overstaying vehicle leaves.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Click the “Save” button to save the settings.

5. Set alarm areas and target size. Click the “Area” tab to go to the interface as shown below.

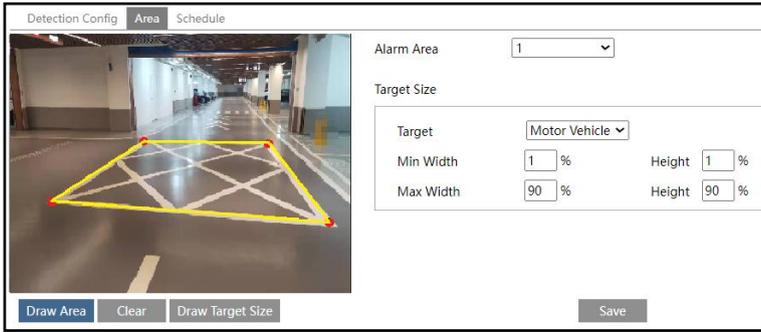

Select the alarm area number on the right side. Four alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

Target size Setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).

6. Set the schedule of loitering detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).


※ **Configuration requirements of the camera and surrounding area**

1. Avoid enabling this function in complex scenes, such as the scene with a large flow of people and vehicles.
2. Other requirements are similar to line crossing detection. Please refer to [Configuration requirements of camera and surrounding area](#) of line crossing detection for details.

3.5.11 Video Metadata

Video Metadata: People, motor vehicle and motorcycle/bicycle in the video can be classified and captured and the relevant features can be extracted and displayed on the live interface.

Go to *Config* → *Event* → *Video Metadata* interface. The setting steps are as follows:

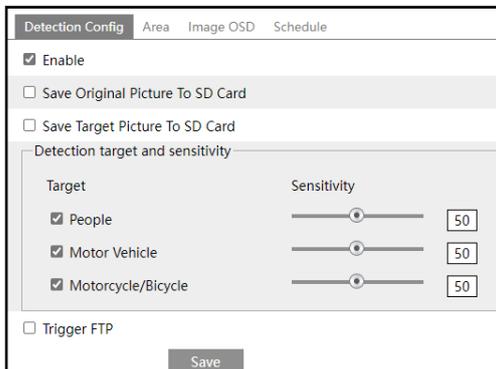

1.Enable video metadata and select the snapshot type and the detection target.

Save Original Picture to SD Card: If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets enter the pre-defined areas.

Save Target Picture to SD Card: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets enter the pre-defined areas.

Detection target: People, motor vehicle and motorcycle/bicycle. All of the three types of objects can be selected simultaneously.

2. Check “Trigger FTP” as needed

3. Set the detection area, blocked area and target size.

Detection Area: 4 detection areas can be set. Targets that enter the pre-defined detection area will be captured.

Blocked Area: 4 blocked areas can be set. Targets that enter the pre-defined blocked area will not be captured.



You need to set the detection area and blocked area separately.

To set detection area:

Check the checkbox of detection area and select the number and to set the detection area.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

To set blocked area:

Check the checkbox of blocked area and select the number and to set the blocked area. The setting steps are the same as detection area settings.

Target size setup: The setup steps of the target size are the same as line crossing target size setup (See [Line Crossing](#) for details).

4.Select the attribute information of the target. Click “Image OSD” and then select the relevant attribute information. When the target is detected, the information you select will be displayed in the attribute display area. See [Video Metadata View](#) for details.


5. Set the schedule of video metadata function. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).
After all settings above are configured, return to the live interface to view the captured pictures and features.

➤ **Video Metadata View**


In the live interface, click  to view the following smart snapshots.



Human information will be shown on the right panel.
Motor vehicle and motorcycle/bicycle information will be shown on the left panel.
Click the captured human picture to view the detailed information as shown below.

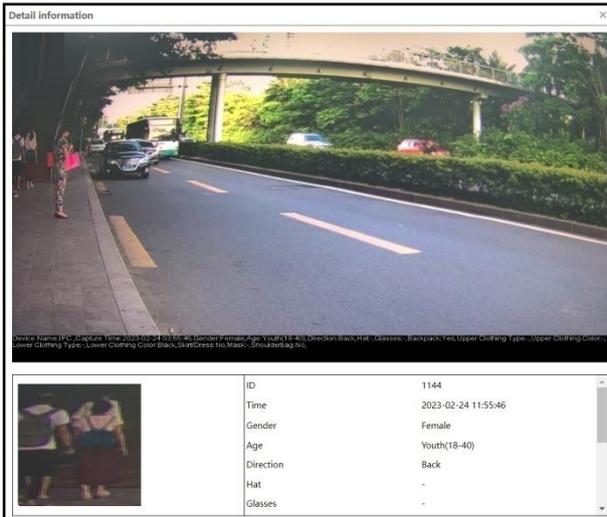

Click the captured vehicle picture to view the detailed information as shown below.

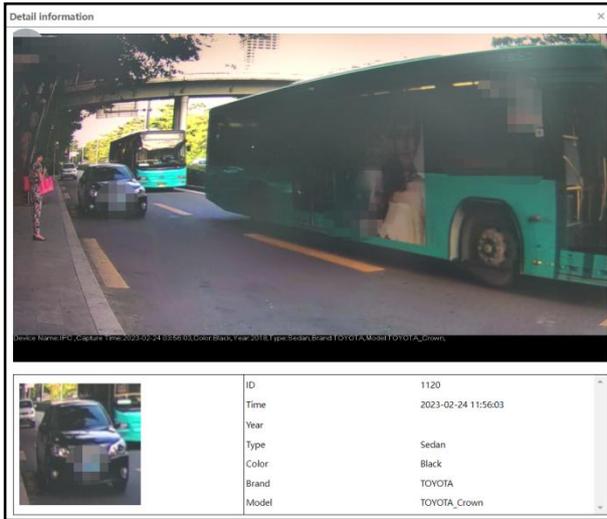

Note: This function is not applicable to the scene with a large flow of people and vehicles.

3.5.12 Face Detection

Face detection function is to detect the face appearing in the surveillance scene. Alarms will be triggered when a face is detected.

Click **Config** → **Event** → **Enable Event**. Select the face event and then save the setting. After the camera restarts successfully, you can view the face detection menu.

The setting steps are as follows:

1. Go to **Config** → **Event** → **Face Detection** as shown below.

Detection Config	Area	Advanced	Schedule
State	Working		
<input checked="" type="checkbox"/> Enable			
<input type="checkbox"/> Save Source Information To SD Card			
<input type="checkbox"/> Save Face Information To SD Card			
Trigger alarm condition	All		
Alarm Holding Time	20 Seconds		
Trigger Alarm Out			
<input type="checkbox"/> Alarm Out			
<input type="checkbox"/> Trigger SD Card Snapshot			
<input type="checkbox"/> Trigger SD Card Recording			
<input type="checkbox"/> Trigger Email			
<input type="checkbox"/> Trigger FTP			
Save			

2. Enable the face detection function.

Save Source Information to SD Card: if checked, the whole picture will be saved to SD card when detecting a face.

Save Face Information to SD Card: if checked, the captured face picture will be saved to SD card when detecting a face.

Note: To save images to the local PC, please enable the local smart snapshot storage first (*Config* → *System* → *Local Config*). To save images to the SD card, please install an SD card first.

Trigger alarm condition: all or mask off can be selectable.

All: Alarms will be triggered when the camera detects a face (with/without a mask).

Mask off: Alarms will be triggered when the detected person is not wearing a mask on the face.


3. Set alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [motion detection](#) section for details.

4. Set alarm detection area.



Click “Draw Area” and drag the border lines of the rectangle to modify its size. Move the rectangle to change its position. Click “Stop Draw” to stop drawing the area. Click “Clear” to clear the area. Then set the detectable face size by defining the maximum value and the minimum value (The default size range of a single face image occupies from 3% to 50% of the entire image).

5. Advanced settings. Choose the snapshot interval and number as needed to avoid capturing multiple similar pictures in a very short period of time.

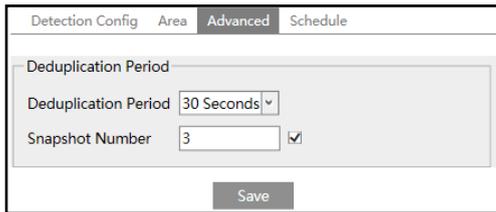

Deduplication Period: If 30 seconds is selected, the camera will capture the same target once every 30 seconds during its continuous tracking period.


Snapshot Number: If the snapshot number is enabled and set (eg. 3), the camera will capture the same target once every 30 seconds and it will capture this target 3 times at most during its continuous tracking period. If the snapshot number is disabled, the camera will capture the same target once every 30 seconds until the target disappears in the detected area.

6. Set the schedule of the face detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

Face Capture View


After enabling face detection function, return to the live view interface. Click  to go to

the following interface. When there are faces detected, the face pictures will be listed on the right. The features of captured faces also can be displayed, such as gender, whether to wear a mask, whether to wear glasses, age group, etc.

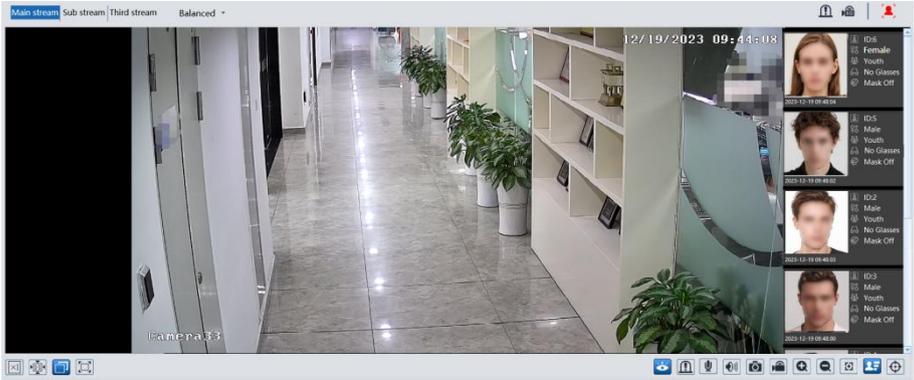

※ Configuration requirements of the camera and surrounding area

1. Cameras must be installed in the area with stable and adequate light sources.
2. The installation height ranges from 2.0m to 3.5m, adjustable according to the focal-length of different lenses and object distances.
3. The depression angle of the camera shall be less than or equal to 15° .

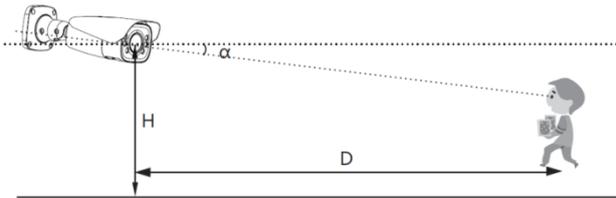

4. The object distance depends on the focal-length of the lens mounted in the camera.
5. In order to guarantee the captured face recognition rate, the requirement for face capture are: left or right turn angle is less than about 30° ; pitching angle is less than 20° .
6. Face illumination must be uniform, if the brightness is low or there is a large area of shadow, need to do the light filling.
7. When dealing with backlight scenarios, enabling BLC, HLC, or WDR can help improve video quality and visibility. These features compensate for extreme lighting conditions and ensure better surveillance results.
8. The following scenes are not applicable, like crowded scenes (airport, railway station, square, etc), and so on.

3.6 Network Configuration

3.6.1 TCP/IP

Go to *Config* → *Network* → *TCP/IP* interface as shown below. There are two ways for network connection.

The screenshot shows the 'IPv4' configuration tab. It has two radio buttons: 'Obtain an IP address automatically' (unselected) and 'Use the following IP address' (selected). Below are input fields for IP Address (192.168.226.201), Subnet Mask (255.255.255.0), Gateway (192.168.226.1), Preferred DNS Server (210.21.196.6), and Alternate DNS Server (8.8.8.8). A 'Test' button is next to the IP Address field.

Use IP address (take IPv4 for example)-There are two options for IP setup: obtain an IP address automatically by DHCP and use the following IP address. Please choose one of the options as needed.

Test: Test the effectiveness of the IP address by clicking this button.

Use PPPoE-Click the “PPPoE Config” tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

The screenshot shows the 'PPPoE Config' tab. It has a checked checkbox for 'Enable'. Below are input fields for 'User Name' (xxxxxxx) and 'Password' (masked with dots). A 'Save' button is at the bottom.

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click “IP Change Notification Config” to go to the interface as shown below.

The screenshot shows the 'IP Change Notification Config' tab. It has two unchecked checkboxes: 'Trigger Email' and 'Trigger FTP'. A 'Save' button is at the bottom.

Trigger Email: when the IP address of the device is changed, the new IP address will be sent to the email address that has been set up.

Trigger FTP: when the IP address of the device is changed, the new IP address will be sent to FTP server that has been set up.

3.6.2 Port

Go to *Config* → *Network* → *Port* interface as shown below.

HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
Data Port	<input type="text" value="9008"/>
RTSP Port	<input type="text" value="554"/>
Persistent connection Port	<input type="text" value="8080"/> <input checked="" type="checkbox"/> Enable
WebSocket Port	<input type="text" value="7681"/>

HTTP Port: The default HTTP port is 80. It can be changed to any port which is not occupied.

HTTPS Port: The default HTTPS port is 443. It can be changed to any port which is not occupied.

Data Port: The default data port is 9008. Please change it as necessary.

RTSP Port: The default port is 554. Please change it as necessary.

Persistent Connection Port: The port is used for a persistent connection of the third-party platform to push smart data, like face pictures.

WebSocket Port: Communication protocol port for plug-in free preview.

3.6.3 Server Configuration

This function is mainly used for connecting network video management system.

<input checked="" type="checkbox"/> Enable
Server Port <input type="text" value="2009"/>
Server Address <input type="text"/>
Device ID <input type="text" value="1"/>

1. Check “Enable”.
2. Check the IP address and port of the transfer media server in the NVMS. Then enable the

auto report in the NVMS when adding a new device. Next, enter the remaining information of the device in the NVMS. After that, the system will automatically allot a device ID. Please check it in the NVMS.


3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click the “Save” button to save the settings.

3.6.4 Onvif

The camera can be searched and connected to the third-party platform via ONVIF/RTSP protocol.

If “Activate Onvif User” is enabled in the device activation interface, the ONVIF user can be activated simultaneously. When you connect the camera through the ONVIF protocol in the third-party platform, you can use this onvif user to connect. If it is not enabled, you can click “Modify” to set the password of admin as needed.

You can also add new users in the Onvif interface.

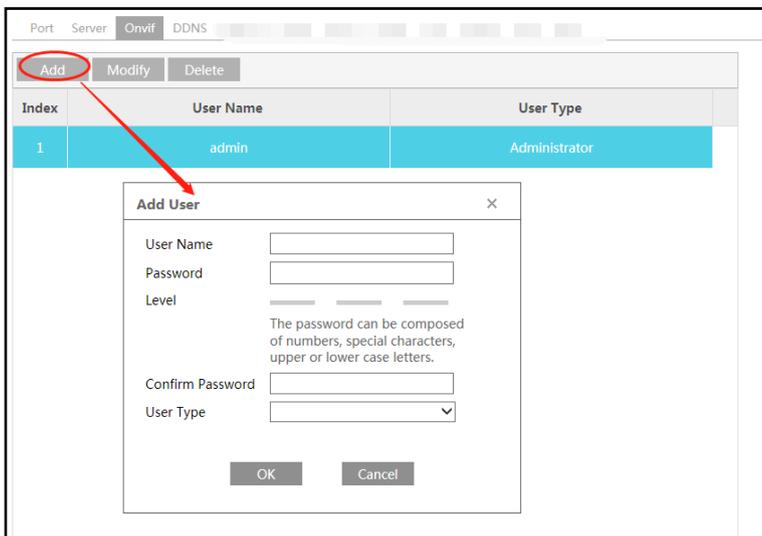

Note: when adding the device to the third-party platform with ONVIF/RTSP protocol, please use the onvif user in the above interface.

3.6.5 DDNS

If the camera is set up with a DHCP connection, DDNS should be set for the internet.

1. Go to **Config** → **Network** → **DDNS**.

<input checked="" type="checkbox"/> Enable	
Server Type	www.dyndns.com
User Name	<input type="text"/>
Password	<input type="text"/>
Domain	<input type="text"/>
<input type="button" value="Save"/>	

2. Apply for a domain name. Take www.dvr dyndns.com for example. Enter www.dvr dyndns.com in the web address bar to visit its website. Then Click the “Registration” button.

NEW USER REGISTRATION	
USER NAME	<input type="text" value="XXXX"/>
PASSWORD	<input type="password" value="•••••"/>
PASSWORD CONFIRM	<input type="password" value="•••••"/>
FIRST NAME	<input type="text" value="xxx"/>
LAST NAME	<input type="text" value="xxx"/>
SECURITY QUESTION.	My first phone number. ▾
ANSWER	<input type="text" value="xxxxxxx"/>
CONFIRM YOU'RE HUMAN	 New Captcha <input type="text"/> Enter the text you see above
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Create domain name.

You must create a domain name to continue.

Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.

dvr dyndns.com

After the domain name is successfully applied for, the domain name will be listed as below.



3. Enter the username, password, domain you apply for in the DDNS configuration interface.
4. Click the “Save” button to save the settings.

3.6.6 SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of the SNMP, such as SNMP port, trap address.

1. Go to **Config** → **Network** → **SNMP**.

SNMP v1/v2	
<input type="checkbox"/>	Enable SNMPv1
<input type="checkbox"/>	Enable SNMPv2
Read SNMP Community	public
Write SNMP Community	private
Trap Address	192.168.226.201
Trap Port	162
Trap community	public
SNMP v3	
<input type="checkbox"/>	Enable SNMPv3
Read User Name	public
Security Level	auth, priv
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	••••••
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	••••••
Write User Name	private
Security Level	auth, priv
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	••••••
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	••••••
Other Settings	
SNMP Port	161

2. Check the corresponding version checkbox (Enable SNMPv1, Enable SNMPv2, Enable SNMPv3) according to the version of the SNMP software that will be used.
3. Set the values for “Read SNMP Community”, “Write SNMP Community”, “Trap Address”, “Trap Port” and so on. Please make sure the settings are the same as that of the SNMP software.

Note: Please use the different version in accordance with the security level you required. The higher the version is, the higher the level of the security is.

3.6.7 802.1x

If it is enabled, the camera’s data can be protected. When the camera is connected to the network protected by the IEEE802.1x, user authentication is needed.

<input checked="" type="checkbox"/> Enable	
Protocol Type	EAP_MD5
EAPOL Version	1
User Name	
Password	••••••
Confirm Password	••••••

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be regarded as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type: EAP_MD5 or EAP_TLS.

Select EAP-TLS as the EAP method. Enter your ID issued by the CA, and then upload related certificate(s). Before connecting the camera to the protected network with 802.1x, apply a digital certificate from a Certificate Authority (i.e., your network administrator) which can be validated by a RADIUS server.

Select EAP_MD5 as the EAP method. You need to enter the username and password.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

3.6.8 RTSP

Go to *Config* → *Network* → *RTSP*.

<input checked="" type="checkbox"/> Enable	
Port	554
Address	rtsp://IP or domain name:port/profile1
	rtsp://IP or domain name:port/profile2
	rtsp://IP or domain name:port/profile3
Multicast address	
Main stream	239.0.0.0 50554 <input type="checkbox"/> Automatic start
Sub stream	239.0.0.1 51554 <input type="checkbox"/> Automatic start
Third stream	239.0.0.2 52554 <input type="checkbox"/> Automatic start
Audio	239.0.0.3 53554 <input type="checkbox"/> Automatic start
<input checked="" type="checkbox"/> Allow anonymous login (No username or password required)	

Check “Enable” to enable the RTSP function.

Port: Access port of the streaming media. The default number is 554.

RTSP Address: The RTSP address (unicast) format that can be used to play the stream in a media player.

Multicast Address

Main stream: The address format is

“rtsp://IP address: rtsp port/profile1?transportmode=mcst”.

Sub stream: The address format is

“rtsp://IP address: rtsp port/profile2?transportmode=mcst”.

Third stream: The address format is

“rtsp://IP address: rtsp port/profile3?transportmode=mcst”.

Audio: Having entered the main/sub stream in a VLC player, the video and audio will play automatically.

If “Allow anonymous login...” is checked, there is no need to enter the username and password to view the video.

If “auto start” is enabled, the multicast received data should be added into a VLC player to play the video.

Note:1. This camera supports local video preview through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcst) in a VLC player to realize the simultaneous video preview with the web client.

2. The IP address mentioned above cannot be the address of IPv6.

3. Avoid the use of the same multicast address in the same local network.

4. When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot play.

5. If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

3.6.9 RTMP

You can access the third-party (like YouTube) to realize video live view through RTMP protocol.

Go to *Config* → *Network* → *RTMP*.

Enable (Only supports H264)

Stream Type: Main stream Sub stream Third stream

Reconnect After Timeout: Second

Server Address:

Connection Status:

Check “Enable”, select stream type and set the reconnection time after timeout and server address as needed.

Server address: Enter the server address allocated by the third party server.

After that, click “Save” to save the settings. Then click “Refresh” to view the connection status.

3.6.10 UPNP

If this function is enabled, the camera can be quickly accessed through the LAN. Go to **Config** → **Network** → **UPnP**. Enable UPNP and then enter UPnP name.

3.6.11 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to **Config** → **Network** → **Email**.

Sender Address: sender’s e-mail address.

User name and password: sender’s user name and password (you don’t have to enter the username and password if “Anonymous Login” is enabled).

Server Address: The SMTP IP address or host name.

Select the secure connection type at the “Secure Connection” pull-down list according to what’s required.

SMTP Port: The SMTP port.

Send Interval(S): The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.


Click the “Test” button to test the connection of the account.

Recipient Address: receiver’s e-mail address.

3.6.12 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

1. Go to *Config* → *Network* → *FTP*.

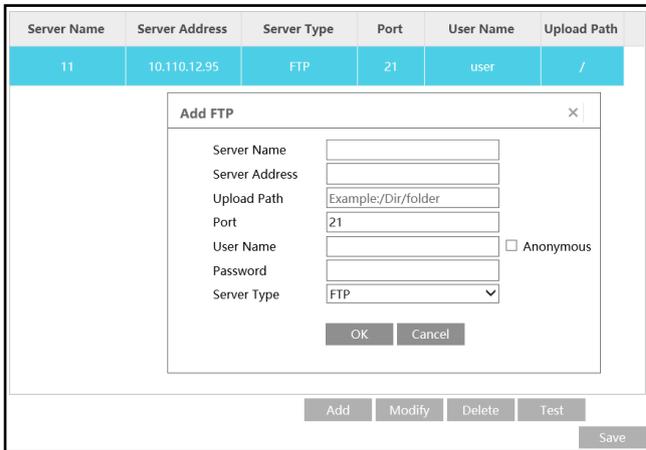

2. Click “Add” to add the information of the FTP. After that, click “Save” to save the settings.

Server Name: The name of the FTP server.

Server Address: The IP address or domain name of the FTP.

Upload Path: The directory where files will be uploaded to.

Port: The port of the FTP server.

User Name and Password: The username and password that are used to login to the FTP server.

Server Type: three options: FTP, FTPS, SFTP

3. In the event setting interface (like intrusion, line crossing, etc.), trigger FTP as shown below.

Trigger FTP

Server Address

192.168.1.3 Attach Picture

Save

Rule of FTP storage path: /device MAC address/event type/date/time/

For example: a face detection alarm occurs

FTP file path: \00-18-ae-a8-da-2a\VFD\2021-01-09\14\

Event name table:

File Name	Event Type
IP	IP address change
MOTION	Motion Detection
SENSOR	Sensor Alarm
TRIPWIRE	Line Crossing Detection
PERIMETER	Region Intrusion Detection
OSC	Object Abandoned/Missing
AVD	Video Exception
VFD	Face Detection
AOIENTRY	Region Entering
AOILEAVE	Region Exiting
PASSLINECOUNT	Target Counting by Line
TRAFFIC	Target Counting by Area
LOITER	Loitering Detection
PVD	Illegal Parking Detection
SDFULL	SD Full
SDERROR	SD Error
VSD	Video Metadata

TXT file content:

device name: xxx mac: device MAC address Event Type time:

For example:

device name: IPC mac: 00-18-ae-a8-da-2a MOTION time: 2021-03-16 12:20:07

3.6.13 HTTP POST

Go to *Config* → *Network* → *HTTP POST* interface.

Add		Modify		Delete		Test			
Index	Enable	IP address/domain	Port	Path	Connection Status	Send heartbeat	Heartbeat interval (Second)	Smart Alarm Type	
1	<input checked="" type="checkbox"/>	10.***.***.151	8080		Online	Yes	90	Motion Detection, Alarm In, Video Exception, Face Det...	

Click “Add” to add HTTP POST.

Add HTTP POST ✕

Enable

Protocol Type http ▾

Domain/IP 0.0.0.0

Server Port 80

Path []

User Name [] Enable

Password *****

Heartbeat interval(Second) 90 Send heartbeat

Smart Alarm Data Select All

- Alarm status data
- Smart track data
- Smart event data Original picture Target picture

Smart Alarm Type Select All

- Motion Detection
- Alarm In
- Region Intrusion
- Line Crossing
- Object Abandoned/Missing
- Video Exception
- Region Entrance
- Region Exiting
- Target Counting by Line
- Target Counting by Area
- Video Metadata
- Illegal Parking Detection
- Loitering Detection
- Audio Exception

Save
Cancel

Protocol type: HTTP

Domain/IP: the IP address/domain name of the third-party platform.

Server port: the server port of the third-party platform.

Path: enter the subdomain of the above server, for example, the URL of alarm information push: “/SendAlarmStatus” .

Username and password: Please enable and enter as needed.


Enable “Send heartbeat” and set heartbeat interval as needed.

After the above parameters are set, click “OK” to save the settings. Select one URL and click

“Test” to test the connection of the URL. Then the camera will automatically connect the third-party platform. The online state can be viewed in the above interface. After the camera is successfully connected, it will send the selected alarm data to the third-party platform once the selected smart alarm is triggered.

3.6.14 HTTPS

HTTPS provides authentication of the web site and protects user privacy. Go to *Config* → *Network* → *HTTPS* as shown below.

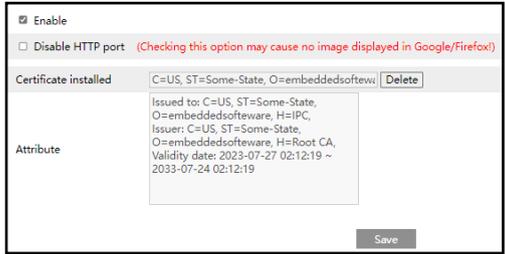


There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via a web browser (eg. https://192.168.226.201:443).

A private certificate can be created if users don't want to use the default one. Click “Delete” to cancel the default certificate. Then the following interface will be displayed.



- * If there is a signed certificate, click “Browse” to select it and then click “Install” to install it.
- * Click “Create a private certificate” to enter the following creation interface.

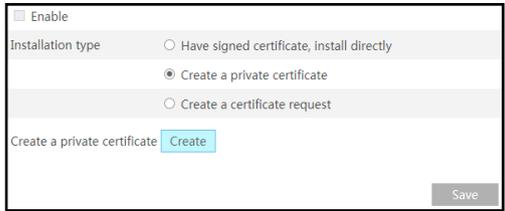

Click the “Create” button to create a private certificate. Enter the country (only two letters

available), domain (camera’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.

* Click “Create a certificate request” to enter the following interface.

The screenshot shows a web interface for creating a certificate. At the top, there is an 'Enable' checkbox. Below it, the 'Installation type' section has three radio button options: 'Have signed certificate, install directly', 'Create a private certificate', and 'Create a certificate request' (which is selected). Underneath, there are three buttons: 'Create', 'Download', and 'Delete'. The 'Create a certificate request' label is followed by these buttons. Below that, there is an 'Install Created Certificate' label followed by 'Browse' and 'Install' buttons. A 'Save' button is located at the bottom right of the form.

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

3.6.15 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With the deficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to *Config* → *Network* → *QoS*.

Video/Audio DSCP	13
Alarm DSCP	35
Manager DSCP	53

Video/Audio DSCP: The range is from 0 to 63.

Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.

Generally speaking, the larger the number is, the higher the priority is.

3.7 Security Configuration


3.7.1 User Configuration

Go to *Config* → *Security* → *User* interface as shown below.

Index	User Name	User Type
1	admin	Administrator

Add user:

1. Click the “Add” button to pop up the following textbox.

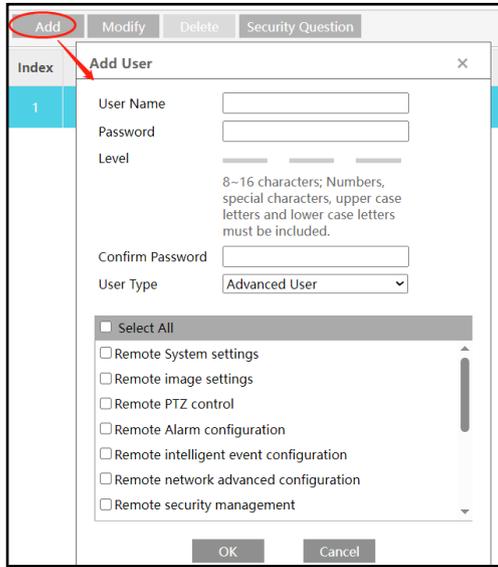

2. Enter user name in the “User Name” textbox.

3. Enter the password in the “Password” and “Confirm Password” textbox. Please set the password according to the requirement of the password security level (Go to **Config** → **Security** → **Security Management** → **Password Security** interface to set the security level).

4. Choose the user type and select the desired user permissions.

5. Click the “OK” button and then the newly added user will be displayed in the user list.

Modify user:

1. Select a user to modify password if necessary in the user configuration list box.

2. The “Edit user” dialog box pops up by clicking the “Modify” button.

3. Check “New Password” checkbox.
4. Enter the old password of the user in the “Old Password” text box.
5. Enter the new password in the “New password” and “Confirm Password” text box.
6. Select the user permissions for advanced or normal user.
7. Click the “OK” button to save the settings.

Note: When the password level is set to “Strong”, the password cannot be modified the same as the previous five.

Delete user:

1. Select the user to be deleted in the user configuration list box.
2. Click the “Delete” button to delete the user.

Note: The default administrator account cannot be deleted.

Safety Question Settings: set the questions and answers for admin so as to reset the password after you forget the password.

3.7.2 Online User


Go to *Config* → *Security* → *Online User* to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	192.168.17.232	55760	admin	Administrator	Kick Out

An administrator user can kick out all the other users (including other administrators).

3.7.3 Block and Allow Lists

Go to *Config* → *Security* → *Block and Allow Lists* as shown below.

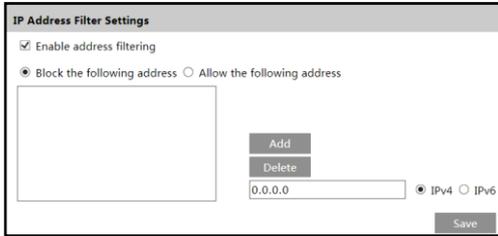


The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6 and then enter IP address in the address box and click the “Add” button.

3.7.4 Security Management

Go to *Config* → *Security* → *Security Management* as shown below.

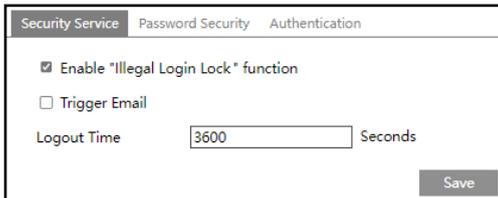

In order to prevent against malicious password unlocking, “Illegal Login Lock” function can be enabled here. If this function is enabled, login failure after trying five times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

Trigger Email: if enabled, e-mail will be sent when logging in/out or illegal login lock occurs.

- Password Security

Security Service	Password Security	Authentication
Password Level	Weak	▼
Expiration Time	Never	▼
		Save

Please set the password level and expiration time as needed.

Password Level: Weak, Medium or Strong.

Weak level: Numbers, special characters, upper or lower case letters can be used. You can choose one of them or any combination of them when setting the password.

Medium Level: 8~16 characters, including at least two of the following categories: numbers, special characters, upper case letters and lower case letters.

Strong Level: 8~16 characters. Numbers, special characters, upper case letters and lower case letters must be included.

For your account security, it is recommended to set a strong password and change your password regularly.

Authentication: RTSP or HTTP authentication is configurable.

Security Service	Password Security	Authentication
RTSP Authentication	Digest	▼
HTTP Authentication	Basic	▼
		Save

Please select “Digest” or “Basic” for RTSP/HTTP authentication as needed.

3.8 Maintenance Configuration

3.8.1 Backup and Restore

Go to *Config* → *Maintenance* → *Backup & Restore*.

The screenshot displays a web-based configuration interface for a network camera. It is divided into four main sections:

- Import Setting:** Contains a text input field for 'Path' with a 'Browse' button to its right, and an 'Import Setting' button below the field.
- Export Settings:** Contains a single 'Export Settings' button.
- Export Maintenance Information:** Features three radio button options:
 - Including software version, system information, network configuration, real-time log
 - Including software version, system information, network configuration, device configuration, operation log, real-time log
 - Including software version, system information, network configuration, device configuration, operation log, historical running log (an SD card is needed)
 An 'Export' button is located below these options.
- Default Settings:** Includes a 'Keep' label followed by a list of three checkboxes:
 - Network Config
 - Security Configuration
 - Image Configuration
 A 'Load Default' button is positioned at the bottom of this section.

● **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

1. Click “Browse” to select the save path for import or export information on the PC.
2. Click the “Import Setting” or “Export Setting” button.

Note: The login password needs to be entered after clicking the “Import Setting” button.

● **Export Maintenance Information**

When the device error occurs, you can export the relevant maintenance information as needed and send them to the technician to find out the problem.

The historical running log can be exported only when your SD card is inserted and the maintenance information has been stored on your SD card (Go to *Config* → *Storage* to view the storage capacity of maintenance information).

● **Default Settings**

Click the “Load Default” button and then verify the password to restore all system settings to the default factory settings except those you want to keep.

3.8.2 Reboot

Go to *Config* → *Maintenance* → *Reboot*.

Click the “Reboot” button and then enter the password to reboot the device.

Scheduled Reboot Setting:

If necessary, the camera can be set up to reboot on a time interval. Enable “Time Settings”, set the date and time, click the “Save” button and then enter the password to save the settings.

3.8.3 Upgrade

Go to *Config* → *Maintenance* → *Upgrade*. In this interface, the camera firmware can be updated.

1. Click the “Browse” button to select the save path of the upgrade file.
2. Click the “Upgrade” button to start upgrading the firmware.
3. Enter the correct password and then the device will restart automatically.

Caution:

1. You cannot downgrade to a lower version.
2. Do not refresh/close the browser or disconnect the camera from the network during the upgrade, or it will cause system failure.

Note: Some devices support two systems. For the device with two systems, after the device is successfully upgraded, there are ten minutes of observation. During this observation period, do not upgrade the device again. After one system is successfully upgraded, the other system will be synchronized. If one system fails caused by power failure or other reasons during the upgrade, the other system will not be affected and the camera still can work normally. You can also upgrade your camera through the normal system.

3.8.4 Operation Log

To query and export log:

1. Go to *Config* → *Maintenance* → *Operation Log*.


Index	Time	Main Type	Sub Type	User Name	Login IP	Hostname
1	2023-12-18 10:13:19	Operation	Log in	admin	10.110.22.88	
2	2023-12-18 10:10:04	Operation	Log in	admin	10.110.22.88	
3	2023-12-18 10:05:29	Operation	Log in	admin	10.15.1.155	

2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.

4.1 Image Search

Click Search to go to the interface as shown below. Images that are saved on the SD card can be found here.

1. Choose “Picture”—“SD Card”.

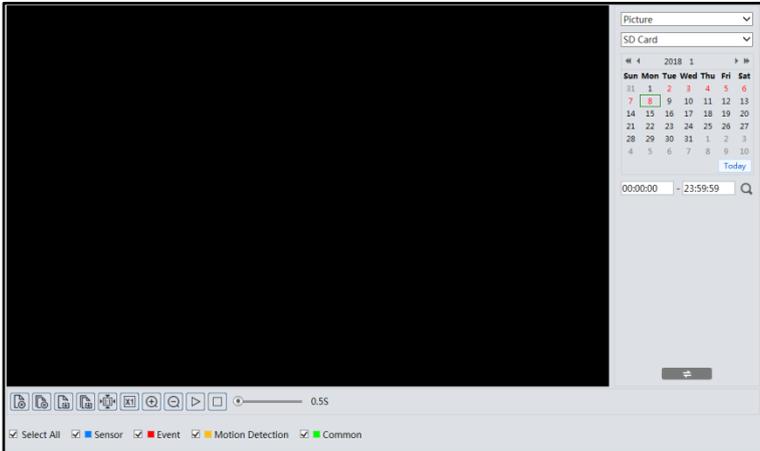

2. Set time: Select date and choose the start and end time.
 3. Choose the alarm events at the bottom of the interface.
 4. Click  to search the images.
 5. Double click a file name in the list to view the captured photos.
- Click  to return to the previous interface.

The descriptions of the buttons are shown as follows.


Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.

Icon	Description	Icon	Description
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		


4.2 Video Search

Click Search to go to the interface as shown below. Videos that were recorded on the SD card can be played in this interface.

1. Choose “Record”—“SD Card”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.

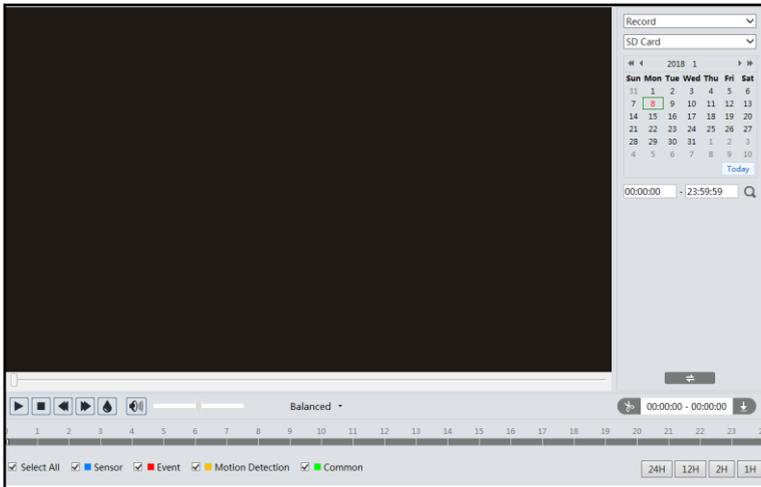

4. Select the alarm events at the bottom of the interface.
5. Select mix stream (video and audio stream) or video stream as needed.
6. Double click on a file name in the list to start playback.

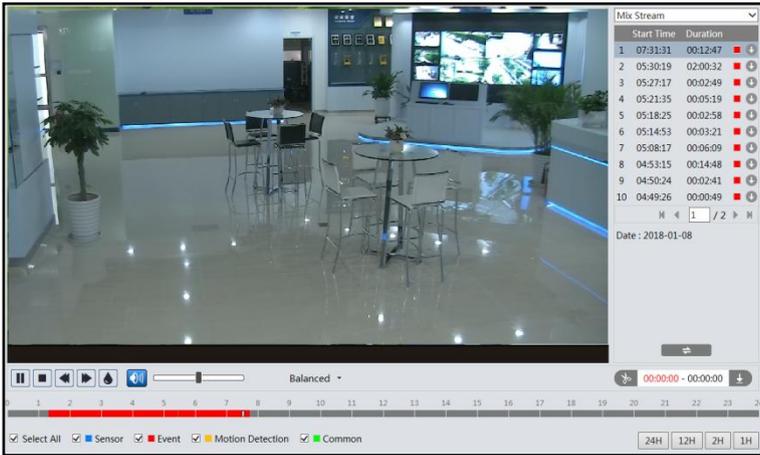

Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio.		

Note: *1.  and  cannot be displayed in the above interface via the plug-in free browser.

*2. For plug-in free playback, playback mode switch (balanced/real-time/fluent mode) and downloading functions are not supported too.

*3. For the fluent playback, it is recommended to use the plug-in required browser to play the recorded file whose resolution exceeds 2MP.

The time table can be shown in 24H/12H/2H/1H format by clicking the corresponding buttons.

Video clip and downloading

1. Search the video files according to the above mentioned steps.
2. Select the start time by clicking on the time table.
3. Click  to set the start time and then this button turns blue ().
4. Select the end time by clicking on the time table. Then click  to set the end time.
5. Click  to download the video file in the PC.

Index	Process	Record	Start Time	End Time	Path	Operate
1	100%	Cut	2018-01-16 01:1...	2018-01-16 01:1...	Favorites	<input type="button" value="Open"/>

D:\Favorites

Click “Set up” to set the storage directory of the video files.

Click “Open” to play the video.

Click “Clear List” to clear the downloading list.

Click “Close” to close the downloading window.

Appendix 1 Troubleshooting

How to find the password?

A: The password for *admin* can be reset through “Edit Safety Question” function.

Click “Forget Password” in the login window and then enter the corresponding answer of the selected question in the popup window. After you correctly answer all questions, you can reset the password for *admin*. If you forget the answer of the question, this way will be invalid, please contact your dealer for help.

B: The passwords of other users can be reset by *admin*.

Fail to connect devices through a web browser.

A: Network is not well connected. Check the connection and make sure it is connected well.

B: IP address is not available. Reset the IP address.

C: Web port number has been changed: contact administrator to get the correct port number.

D: Exclude the above reasons. Restore to default setting by IP-Tool.


IP tool cannot search devices.

It may be caused by the anti-virus software in your computer. Please exit it and try to search device again.

IE cannot download ActiveX control.

A. IE browser may be set up to block ActiveX. Follow the steps below.

① Open IE browser and then click Tools-----Internet Options.

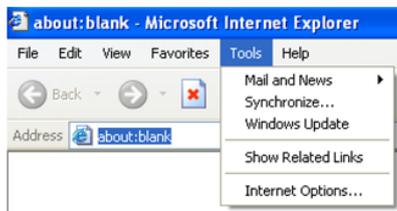

② Select Security-----Custom Level....

③ Enable all the options under “ActiveX controls and plug-ins”.

④ Click OK to finish setup.

B. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or close them.




No sound can be heard.

A: Audio input device is not connected. Please connect and try again.


B: Audio function is not enabled at the corresponding channel. Please enable this function.

How to modify IP address through IP-Tool?

A: After you install the IP-Tool, run it as shown below.

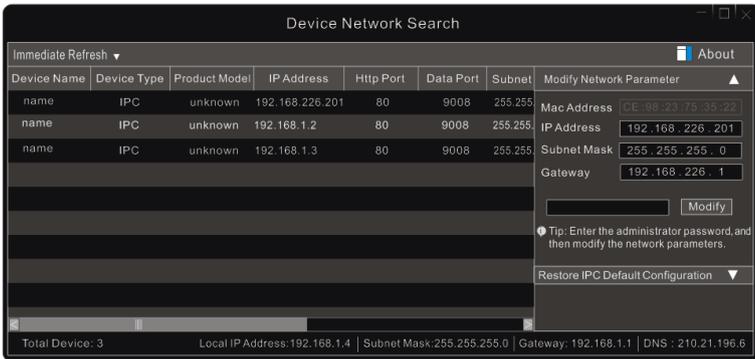


The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

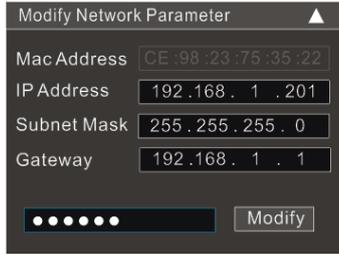

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of “admin” which is set in the device activation interface in advance and then click the “Modify” button to change the network parameters.

How to restore to factory default setting through IP-Tool?

A: Drag the slider at the bottom of the device list to the right and then the MAC address of the searched devices will be viewed. Find the MAC address of the IPC you want to restore to the factory default setting, click next to “Restore IPC Default Configuration” to expand the menu, then enter the MAC address and click “OK”. After that, manually reboot your camera within 30s. Then the camera will successfully restore to the factory default setting.

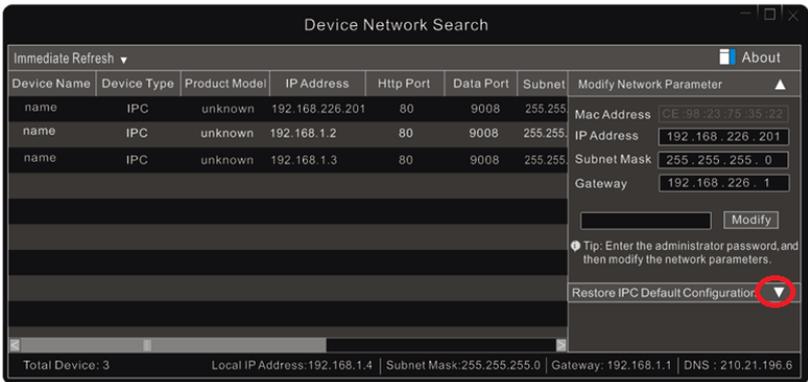

Secure the world with you

Shenzhen TVT Digital Technology Co., Ltd
Address: 23th Floor, Block B4, Building No.9, Shenzhen Bay
Eco-Technology Park, Nanshan District, Shenzhen, Guangdong
Province, PR China
Email: overseas@tvt.net.cn
Website: <http://en.tvt.net.cn>